
Super Pro Cutter Manual


This manual is applicable to the following models:

- VRC-1000
- 5103-01-01

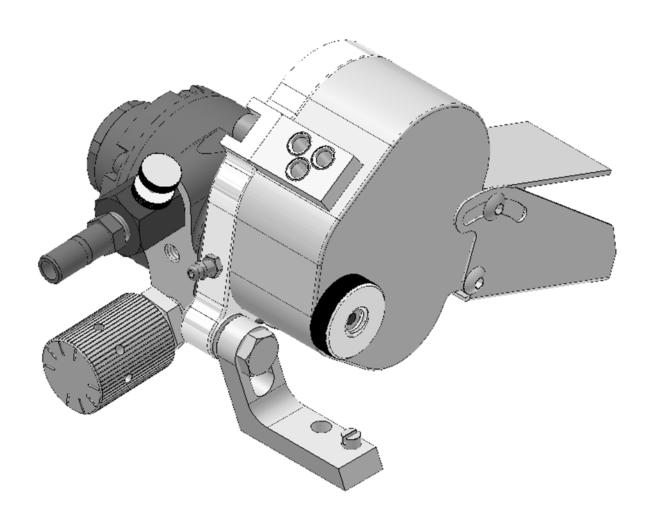



Rev. November 2020

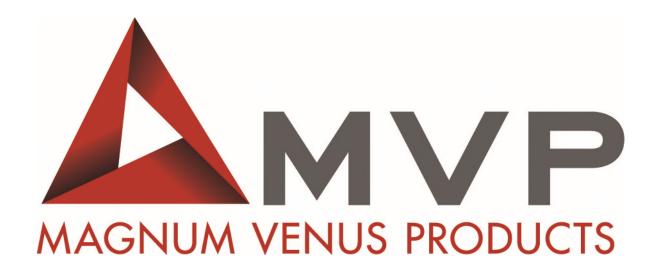

CORPORATE HEADQUARTERS 2030 Falling Waters Rd, Suite 350, Knoxville, TN 37922 · USA · Tel: (865) 686-5670

DISTRIBUTION AND PURCHASING 642 Barbrow Ln, Knoxville, TN 37932 · USA · Tel: (865) 684-4416

TECHNOLOGY CENTER AND MANUFACTURING

1862 Ives Ave, Kent, WA 98032 · USA · Tel (253) 854-2660 · Fax (253) 854-1666

E-mail: info@mvpind.com

For a list of international distributors, visit our website at:

www.mvpind.com/mvp-international

Use of this product confirms that Magnum Venus Products, Inc.'s standard terms and conditions of sale apply.



△ Table of Contents

| Section | Page |
|--|------|
| Table of Contents | 3 |
| Safety & Warning Information | 4 |
| • Introduction | 15 |
| Performing Maintenance | 16 |
| Disassembling Cutter | 19 |
| Assembling Cutter | 20 |
| Adjusting Cutter | 20 |
| Parts Drawings | 21 |



Safety & Warning Information

Warnings 4

Due to the vast number of chemicals that could be used and their varying chemical reactions, the buyer and user of this equipment should determine all factors relating to the fluids used, including any of the potential hazards involved. Particular inquiry and investigation should be made into potential dangers relating to toxic fumes, fires, explosions, reaction times, and exposure of human beings to the individual components or their resultant mixtures. MVP assumes no responsibility for loss, damage, expense or claims for bodily injury or property damage, direct or consequential, arising from the use of such chemical components.

The end user is responsible for ensuring that the end product or system complies with all the relevant laws in the country where it is to be used and that all documentation is adhered to.

Recommended Occupational Safety & Health Act (OSHA) Documentation:

1910.94 Pertaining to ventilation Pertaining to flammable liquids 1910.106 Pertaining to spray finishing operations, particularly paragraph (m), 1910.107 Organic Peroxides and Dual Component Coatings

For Additional information, contact the Occupational Safety and Health Administration (OSHA) at https://www.osha.gov/about.html.

Recommended National Fire Protection Association (NFPA) Documentation:

Organic Peroxides and Dual Component Materials NFPA No.33 Chapter 14 NFPA No. 63 **Dust Explosion Prevention** National Electrical Code NFPA No. 70 Static Electricity NFPA No. 77 Blower and Exhaust System NFPA No. 91 Plastics Industry Dust Hazards NFPA No. 654

Fire Extinguisher – code ABC, rating number 4a60bc using Extinguishing Media –Foam, Carbon Dioxide, Dry Chemical, Water Fog, is recommended for this product and applications.

The following general warnings and guidelines are for the setup, use, grounding, maintenance, and repair of equipment. Additional product-specific warnings may be found throughout this manual as applicable. Please contact your nearest MVP Technical Service Representative if additional information is needed.



Safety Precautions

- Avoid skin contact and inhalation of all chemicals.
- Review Material Safety Data Sheet (MSDS) to promote the safe handling of chemicals in use
- Restrict the use of all chemicals to designated areas with good ventilation.
- Chemicals are flammable and reactive.
- Noxious fumes released when combusted.
- Operate equipment in a ventilated environment only.
- Uncured liquid resins are highly flammable unless specifically labeled otherwise.
- Cured laminate, accumulations of overspray, and laminate sandings are highly combustible.
- Do not operate or move electrical equipment when flammable fumes are present.
- Ground all equipment.
- If a spark is seen or felt, immediately halt operation. Do not operate the equipment until the issue has been identified and repaired.
- Contaminated catalyst may cause fire or explosion.
- Containers may explode if exposed to fire / heat.
- Use and store chemicals away from heat, flames, and sparks.
- Do not smoke in work areas or near stored chemicals.
- Do not mix Methyl Ethyl Ketone Peroxide (MEKP) with materials other than polyethylene.
- Do not dilute MEKP.
- Keep food and drink away from work area.







FLAMMABLE



GROUNDING



EXPLOSIVE



DANGER



ER || DANG



Physical Hazards

- Never look directly into the spray gun fluid tip. Serious injury or death can result.
- Never aim the spray gun at or near another person. Serious injury or death can result.
- Chemical compounds can be severely irritating to the eyes and skin.
- Inhalation, ingestion, or injection may damage internal organs and lead to pulmonary disorders, cancers, lymphomas, and other diseases or health conditions.
- Other potential health effects include: irritation of the eyes and upper respiratory tract, headache, light-headedness, dizziness, confusion, drowsiness, nausea, vomiting, and occasionally abdominal pain.
- Eye contact: Immediately flush with water for at least 15 minutes and seek immediate medical attention.
- Skin Contact: Immediately wash with soap and water and seek immediate medical attention.
- Inhalation: Move the person to fresh air and seek immediate medical attention.
- Do not remove shields, covers, or safety features on equipment that is in use.
- Never place fingers, hands, or any body part near or directly in front of the spray gun fluid tip. The force of the liquid as it exits the spray tip can shoot liquid through the skin.
- Keep hands and body parts away from any moving equipment or components.
- Do not stand under plunger
- An improperly loaded drum may lead to an imbalance, causing a unit to tip over





Personal Protective Equipment (PPE)

- MVP recommends the use of personal safety equipment with all products in our catalog.
- Wear safety goggles, hearing protection, a respirator, and chemical resistant gloves.
- Wear long sleeve shirts or jackets and pants to minimize skin exposure.
- PPE should be worn by operators and service technicians to reduce the risk of injury.



For Additional information, contact the Occupational Safety and Health Administration (OSHA). https://www.osha.gov/about.html



Symbol Definitions



Indicates the risk of contact with chemicals that are hazardous, which may lead to injury or death.



Indicates the risk of contact with voltage / amperage that may lead to serious injury or death



Indicates that the materials being used are susceptible to combustion



Indicates the risk of contact with moving components that may lead to serious injury or death.



Indicates that the system or component should be grounded before proceeding with use or repair.



Indicates the use of lit cigarettes or cigars is prohibited, because the materials being used are susceptible to combustion.



Indicates that the materials and/or the process being performed can lead to ignition and explosion.



A recommendation for the use of Personal Protective Equipment (PPE) before using or repairing the product.



Polymer Matrix Materials: Advanced Composites

Potential health hazards associated with the use of advanced composites can be controlled through the implementation of an effective industrial hygiene and safety program.

https://www.osha.gov/dts/osta/otm/otm_iii/otm_iii_1.html#t iii:1_1

| Resins | | |
|--------------------------------------|---------------------------------------|---|
| Composite Component | Organ System Target (Possible Target) | Known (Possible) Health Effect |
| Epoxy resins | Skin, lungs, eyes | Contact and allergic dermatitis, conjunctivitis |
| Polyurethane resins | Lungs, skin, eyes | Respiratory sensitization, contact dermatitis, conjunctivitis |
| Phenol formaldehyde | Skin, lungs, eyes | As above (potential carcinogen) |
| Bismaleimides (BMI) | Skin, lungs, eyes | As above (potential carcinogen) |
| Polyamides | Skin, lungs, eyes | As above (potential carcinogen) |
| Reinforcing materials | | |
| Composite Component | Organ System Target (Possible Target) | Known (Possible) Health Effect |
| Aramid fibers | Skin (lungs) | Skin and respiratory irritation, contact dermatitis (chronic interstitial lung disease) |
| Carbon/graphite fibers | Skin (lungs) | As noted for aramid fibers |
| Glass fibers (continuous filament) | Skin (lungs) | As noted for aramid fibers |
| Hardeners and curing agents | | |
| Composite Component | Organ System Target (Possible Target) | Known (Possible) Health Effect |
| Diaminodiphenylsulfone | N/A | No known effects with workplace exposure |
| Methylenedianiline | Liver, skin | Hepatotoxicity, suspect human carcinogen |
| Other aromatic amines | | |
| Composite Component | Organ System Target (Possible Target) | Known (Possible) Health Effect |
| Meta-phenylenediamine (MPDA) | Liver, skin (kidney, bladder) | Hepatitis, contact dermatitis (kidney and bladder cancer) |
| Aliphatic and cyclo-aliphatic amines | Eyes, skin | Severe irritation, contact dermatitis |
| Polyaminoamide | Eyes, skin | Irritation (sensitization) |
| Anhydride | Eyes, lungs, skin | Severe eye and skin irritation, respiratory sensitization, contact dermatitis |



Catalyst - Methyl Ethyl Ketone Peroxide (MEKP)

MEKP is among the more hazardous materials found in commercial channels. The safe handling of the "unstable (reactive)" chemicals presents a definite challenge to the plastics industry. The highly reactive property which makes MEKP valuable to the plastics industry in producing the curing reaction of polyester resins also produces the hazards which require great care and caution in its storage, transportation, handling, processing and disposal. MEKP is a single chemical. Various polymeric forms may exist which are more or less hazardous with respect to each other. These differences may arise not only from different molecular structures (all are, nevertheless, called "MEKP") and from possible trace impurities left from the manufacture of the chemicals, but may also arise by contamination of MEKP with other materials in its storage or use. Even a small amount of contamination with acetone, for instance, may produce an extremely shock-sensitive and explosive compound.



WARNING

Contamination with promoters, materials containing promoters (such as laminate sandings), or with any readily oxidizing material (such as brass or iron) will cause exothermic redox reactions which can be explosive in nature. Heat applied to MEKP or heat buildup from contamination reactions can cause the material to reach its Self-Accelerating Decomposition Temperature (SADT).

Researchers have reported measuring pressure rates-of-rise well over 100,000 psi per second when certain MEKP's reach their SADT. For comparison, the highest-pressure rate-of-rise listed in NFPA Bulletin NO.68, "Explosion Venting", is 12,000 psi per second for an explosion of 12% acetylene and air. The maximum value listed for a hydrogen explosion is 10,000 psi per second. Some forms of MEKP, if allowed to reach their SADT, will burst even an open topped container. This suggests that it is not possible to design a relief valve to vent this order of magnitude of pressure rate-of-rise. The user should be aware that any closed container, be it a pressure vessel, surge chamber, or pressure accumulator, could explode under certain conditions. There is no engineering substitute for care by the user in handling organic peroxide catalysts. If, at any time, the pressure relieve valve on top of the catalyst tank should vent, the area should be evacuated at once and the fire department called. The venting could be the first indication of a heat, and therefore, pressure build-up that could eventually lead to an explosion. Moreover, if a catalyst tank is sufficiently full when the pressure relief valve vents, some catalyst may spray out, which could cause eye injury. For this reason, and many others, anyone whose job puts them in an area where this vented spray might go, should always wear full eye protection even when laminating operations are not taking place.

Safety in handling MEKP depends to a great extent on employee education, proper safety instructions, and safe use of the chemicals and equipment. Workers should be thoroughly informed of the hazards that may result from improper handling of MEKP, especially regarding contamination, heat, friction and impact. They should be thoroughly instructed regarding the proper action to be taken in the storage, use, and disposal of MEKP and other hazardous materials used in the laminating operation. In addition, users should make every effort to:

- Store MEKP in a cool, dry place in original containers away from direct sunlight and away from other chemicals.
- Keep MEKP away from heat, sparks, and open flames.
- Prevent contamination or MEKP with other materials, including polyester over spray and sandings, polymerization accelerators and promoters, brass, aluminum, and non-stainless steels.



- Never add MEKP to anything that is hot, since explosive decomposition may result.
- Avoid contact with skin, eyes, and clothing. Protective equipment should be worn at all times. During clean-up of spilled MEKP, personal safety equipment, gloves, and eye protection must be worn. Firefighting equipment should be at hand and ready.
- Avoid spillage, which can heat up to the point of self-ignition.
- Repair any leaks discovered in the catalyst system immediately, and clean-up the leaked catalyst at once in accordance with the catalyst manufacturer's instructions.
- Use only original equipment or equivalent parts from Magnum Venus Products in the catalyst system (i.e.: hoses, fitting, etc.) because a dangerous chemical reaction may result between substituted parts and MEKP.
- Catalyst accumulated from the purging of hoses or the measurement of fluid output deliveries should never be returned to the supply tank, such catalyst should be diluted with copious quantities of clean water and disposed of in accordance with the catalyst manufacturer's instructions.

The extent to which the user is successful in accomplishing these ends and any additional recommendations by the catalyst manufacturer determines largely the safety that will be present in his operation.

Clean-Up Solvents and Resin Diluents



WARNING

A hazardous situation may be present in your pressurized fluid system! Hydro carbon solvents can cause an explosion when used with aluminum or galvanized components in a closed (pressurized) fluid system (pump, heaters, filters, valves, spray guns, tanks, etc.). An explosion could cause serious injury, death, and/or substantial property damage. Cleaning agents, coatings, paints, etc. may contain Halogenated Hydrocarbon solvents. Some Magnum Venus Products spray equipment includes aluminum or galvanized components and will be affected by Halogenated Hydrocarbon solvents.

There are three key elements to the Halogenated Hyrdocarbon (HHC) solvent hazard.

- The presence of HHC solvents.
- Aluminum or Galvanized Parts.
- 3. Equipment capable of withstanding pressure.
- 1,1,1 Trichloroethane and Methylene Chloride are the most common of these solvents. However, other HHC solvents are suspect if used; either as part of paint or adhesives formulation, or for clean-up flushing. Most handling equipment contains these elements. In contact with these metals, HHC solvents could generate a corrosive reaction of a catalytic nature.
- When HHC solvent contact aluminum or galvanized parts inside a closed container such as a pump, spray gun, or fluid handling system, the chemical reaction can, over time, result in a build-up of heat and pressure, which can reach explosive proportions. When all three elements are present, the result can be an extremely violent explosion. The reaction can be sustained with very little aluminum or galvanized metal; any amount of aluminum is too much.



- The reaction is unpredictable. Prior use of an HHC solvent without incident (corrosion or explosion) does NOT mean that such use is safe. These solvents can be dangerous alone (as a clean-up or flushing agent) or when used as a component or a coating material. There is no known inhibitor that is effective under all circumstances. Mixing HHC solvents with other materials or solvents such as MEKP, alcohol, or toluene may render the inhibitors ineffective.
- The use of reclaimed solvents is particularly hazardous. Reclaimers may not add any inhibitors. The possible presence of water in reclaimed solvents could also feed the reaction.
- Anodized or other oxide coatings cannot be relied upon to prevent the explosive reaction. Such
 coatings can be worn, cracked, scratched, or too thin to prevent contact. There is no known way
 to make oxide coatings or to employ aluminum alloys to safely prevent the chemical reaction
 under all circumstances.
- Several solvent suppliers have recently begun promoting HHC solvents for use in coating systems. The increasing use of HHC solvents is increasing the risk. Because of their exemption from many state implementation plans as Volatile Organic Compounds (VOCs), their low flammability hazard, and their not being classified as toxic or carcinogenic substances, HHC solvents are very desirable in many respects.



WARNING

Do not use Halogenated Hydrocarbon (HHC) solvents in pressurized fluid systems having aluminum or galvanized wetted parts.

Magnum Venus Products is aware of NO stabilizers available to prevent HHC solvents from reaction under all conditions with aluminum components in closed fluid systems. HHC solvents are dangerous when used with aluminum components in a closed fluid system.

- Consult your material supplier to determine whether your solvent or coating contains Halogenated Hydrocarbon solvents.
- Magnum Venus Products recommends that you contact your solvent supplier regarding the best non-flammable clean-up solvent with the heat toxicity for your application.
- If, however, you find it necessary to use flammable solvents, they must be kept in approved, electrically grounded containers.
- Bulk solvent should be stored in a well-ventilated, separate building, 50 feet away from your main plant.
- You should only allow enough solvent for one day's use in your laminating area.
- NO SMOKING signs must be posted and observed in all areas of storage or where solvents and other flammable materials are used.
- Adequate ventilation (as covered in OSHA Section 1910.94 and NFPA No.91) is important wherever solvents are stored or used, to minimize, confine and exhaust the solvent vapors.
- Solvents should be handled in accordance with OSHA Section 1910.106 and 1910.107.



Catalyst Diluents

Magnum Venus Products spray-up and gel-coat systems currently produced are designed so that catalyst diluents are not required. Magnum Venus Products therefore recommends that diluents not be used to avoid possible contamination which could lead to an explosion due to the handling and mixing of MEKP and diluents. In addition, it eliminates any problems from the diluent being contaminated through rust particles in drums, poor quality control on the part of the diluents suppliers, or any other reason. If diluents are absolutely required, contact your catalyst supplier and follow his instructions explicitly. Preferably the supplier should premix the catalyst to prevent possible "on the job" contamination while mixing.



WARNING

If diluents are not used, remember that catalyst spillage and gun, hose, and packing leaks are potentially more hazardous since each drop contains a higher concentration of catalyst and will therefore react more quickly with overspray and the leak.

Cured Laminate, Overspray and Laminate Sandings Accumulation

- Remove all accumulations of overspray, Fiberglass Reinforced Plastic (FRP) sandings, etc. from the building as they occur. If this waste is allowed to build up, spillage of catalyst is more likely to start a fire; in addition, the fire would burn hotter and longer.
- Floor coverings, if used, should be non-combustible.
- Spilled or leaked catalyst may cause a fire if it comes in contact with an FRP product, oversprayed chop or resin, FRP sandings or any other material with MEKP.

To prevent spillage and leakage, you should:

the hoses at any point.

| 1. | Maintain your Magnum Venus Products System. | Check the gun several times daily for catalyst and resin packing or valve leaks. REPAIR ALL LEAKS |
|----|--|---|
| | | IMMEDIATELY. |
| 2. | Never leave the gun hanging over | A catalyst leak in this situation would certainly |
| | or lying inside the mold. | damage the part, possibly the mold, and may cause a fire. |
| | | a iii e. |
| 3. | Inspect resin and catalyst hoses | Replace if wear or weakness is evident or |
| | daily for wear or stress at the entry | suspected. |
| | and exits of the boom sections and | |
| | at the hose and fittings. | |
| 4. | Arrange the hoses and fiberglass | If allowed to rub, the hose will be cut through, |
| | roving guides so that the fiberglass | causing a hazardous leakage of material which |
| | strands DO NOT rub against any of | could increase the danger of fire. Also, the material |

may spew onto personnel in the area.



Toxicity of Chemicals

- Magnum Venus Products recommends that you consult OSHA Sections 1910.94, 1910.106, 1910.107 and NFPA No.33, Chapter 14, and NFPA No.91.
- Contact your chemical supplier(s) and determine the toxicity of the various chemicals used as well as the best methods to prevent injury, irritation and danger to personnel.
- Also determine the best methods of first aid treatment for each chemical used in your plant.

Equipment Safety

Magnum Venus Products suggest that personal safety equipment such as EYE GOGGLES, GLOVES, EAR PROTECTION, and RESPIRATORS be worn when servicing or operating this equipment. Ear protection should be worn when operating a fiberglass chopper to protect against hearing loss since noise levels can be as high as 116 dB (decibels). This equipment should only be operated or serviced by technically trained personnel!



CAUTION

Never place fingers, hands, or any body part near or directly in front of the spray gun fluid tip. The force of the liquid as it exits the spray tip can cause serious injury by shooting liquid through the skin. NEVER LOOK DIRECTLY INTO THE GUN SPRAY TIP OR POINT THE GUN AT OR NEAR ANOTHER PERSON OR AN ANIMAL.



DANGER

Contaminated catalyst may cause fire or explosion. Before working on the catalyst pump or catalyst accumulator, wash hands and tools thoroughly. Be sure work area is free from dirt, grease, or resin. Clean catalyst system components with clean water daily.



DANGER

Eye, skin, and respiration hazard. The catalyst MEKP may cause blindness, skin irritation, or breathing difficulty. Keep hands away from face. Keep food and drink away from work area.

Treatment of Chemical Injuries



CAUTION

Refer to your catalyst manufacturer's safety information regarding the safe handling and storage of catalyst. Wear appropriate safety equipment as recommended.

Great care should be used in handling the chemicals (resins, catalyst and solvents) used in polyester systems. Such chemicals should be treated as if they hurt your skin and eyes and as if they are poison to your body. For this reason, Magnum Venus Products recommends the use of protective clothing and eye wear in using polyester systems. However, users should be prepared in the event of such an injury.



Precautions include:

- 1. Know precisely what chemicals you are using and obtain information from your chemical supplier on what to do in the event the chemical gets onto your skin or into the eyes, or if swallowed.
- 2. Keep this information together and easily available so that it may be used by those administering first aid or treating the injured person.
- 3. Be sure the information from your chemical supplier includes instructions on how to treat any toxic effects the chemicals have.



WARNING

Contact your doctor immediately in the event of an injury. If the product's MSDS includes first aid instructions, administer first aid immediately after contacting a doctor.

Fast treatment of the outer skin and eyes that contact chemicals generally includes immediate and thorough washing of the exposed skin and immediate and continuous flushing of the eyes with lots of clean water for at least 15 minutes or more. These general instructions of first aid treatment may be incorrect for some chemicals; you must know the chemicals and treatment before an accident occurs. Treatment for swallowing a chemical frequently depends upon the nature of the chemical.

Emergency Stop Procedure

In an emergency, follow these steps to stop a system:

1. The ball valve located where the air enters the power head of the resin pump, should be moved to the "OFF" or closed position.

Note The "open" or "on" position is when the ball valve handle is parallel (in line) with the ball valve body. The "closed" or "off" position is when the ball valve handle is perpendicular (across) the ball valve body.

- 2. Turn all system regulators to the "OFF" position (counter-clockwise) position.
- 3. Verify / secure the catalyst relief line, located on the catalyst relief valve.
- 4. Verify / secure the resin return line, located on the resin filter.
- 5. Place a container under the resin pump ball valve to catch ejected resin.
- 6. Locate the ball valve on the resin pump.
- 7. Rotate the ball valve 90 degrees to the "On" or open position.

Grounding

Grounding an object means providing an adequate path for the flow of the electrical charge from the object to the ground. An adequate path is one that permits charge to flow from the object fast enough that it will not accumulate to the extent that a spark can be formed. It is not possible to define exactly what will be an adequate path under all conditions since it depends on many variables. In any event, the grounding means should have the lowest possible electrical resistance.



Grounding straps should be installed on all loose conductive objects in the spraying area. This includes material containers and equipment. Magnum Venus Products recommends grounding straps be made of AWG No.18 stranded wire as a minimum and the larger wire be used where possible. NFPA Bulletin No77 states that the electrical resistance of such a leakage path may be as low as 1 meg ohm (10 ohms) but that resistance as high as 10,000 meg ohms will produce an adequate leakage path in some cases.

CAUTION



Whenever flammable or combustible liquids are transferred from one container to another, or from one container to the equipment, both containers or container and equipment shall be effectively bonded and grounded to dissipate static electricity. For further information, see National Fire Protection Association (NFPA) 77, titled "Recommended Practice on Static Electrical". Refer especially to section 7-7 titled "Spray Application of Flammable and Combustible Materials".

Introduction

This manual provides information for the operation, maintenance, and simple repair of the MVP Super Pro Cutter. The following procedures are included:


- Maintenance instructions
- Specifications and adjustments



Please read this manual carefully and retain for future reference. Follow the steps in the order given, otherwise you may damage the equipment or injure yourself.

Specifications

The Super Pro Cutter uses a wedge style rotor assembly. The rotor is 1.375" (34.9 mm) diameter.

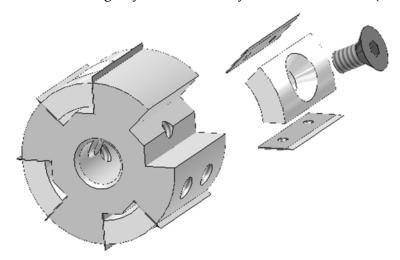



| Wedge Rotor Assemblies | | | | | |
|------------------------|--|-------------|---------------------|--|--|
| Part Number | Description | Chop Length | Optional Config. | | |
| 5113-03-01 | 6 Blade Wedge Rotor | 0.72" | 2 Blade, 2.16" chop | | |
| 3113-03-01 6 Blade W | o blade Wedge Hotol | 0.72 | 3 Blade, 1.44" chop | | |
| 5103-03-01 | 5103-03-01 8 Blade Wedge Rotor 0.54" | | 2 Blade, 2.16" chop | | |
| 3103-03-01 | o blade Wedge Hotol | 0.54 | 4 Blade, 1.08" chop | | |

Performing Maintenance

Replacing Chopper Blades

Inspect chopper blades daily and replace any that become worn or chipped.



WARNING

Before attempting to inspect or replace blades, make sure all air to the chopper is disconnected.

- 1. Remove the chopper cover by turning the cover stud.
- 2. Remove the rotor from the air motor shaft.



WARNING

BLADES ARE SHARP. To prevent injury, use caution when working with

- 3. Remove the set screws, then each of the hex screws holding a wedge in place and remove the wedge and blades.
- 4. Before installing the new blades, lightly dull the sharp edges by moving them gently back and forth on cardboard.
- 5. Slide the new blades in place and secure with the wedges and screws.
- 6. Position the rotor so that as it rotates clockwise, the retainer and spring contact the rubber roll before the blade does (i.e. the blade hits last).
- 7. Slide the rotor onto the air motor shaft so that the set screws align with the flat on the air motor shaft.
- 8. Adjust the rotor so that the blades should align with the rubber roll.
- 9. Secure the rotor by tightening the set screws.
- 10. Attach the cover to the chopper, aligning the base plate's notch with the boss in the cover.
- 11. Twist the cover stud to lock the cover in place.



WARNING

Never operate the chopper without the cover installed or personal injury may result.



Reinstall Glass

- 12. Thread the glass strands through the brake guides on the boom.
- 13. Bend the end of a strand of glass to form a small loop.
- 14. Insert the loop into a hole in the chopper cover.
- 15. **Carefully** insert your finger into the chopper and rotate the rubber roll by placing your finger under the roll and pulling **toward** you.

This pulls the glass strand into position between the rubber roll and the blade rotor assembly.

Note Using two strands of glass results in a better glass pattern and less wear on the chopper unit.

Replacing Rubber Roll

Inspect the rubber roll daily. If you see deep grooves in the roll or if the chopper is delivering longer glass strands than normal, replace the roll.



WARNING

Before attempting to inspect or repair the equipment, make sure all air to the chopper is disconnected.

- 1. Disconnect air to the chopper.
- 2. Remove the chopper cover by turning the cover stud.



WARNING

BLADES ARE SHARP. To prevent injury, use caution when working with the rotor.

- 3. Loosen the socket cap screw in the center of the rubber roll and mandrel enough to slide the slide adjust nut from the slot in the base plate.
- 4. Remove the E-ring on the mandrel.
- 5. Pull the rubber roll off the mandrel.

Note If needed, a screwdriver may be used as a lever to remove the E-ring and rubber roll.

Note Do not soak the mandrel or rubber roll in solvent.

- 6. Push the new rubber roll onto the mandrel.
- 7. Snap the E-ring into position on the end of the mandrel.
- 8. Use the socket wrench to secure the rubber roll and mandrel to the chopper.



Adjusting Rubber Roll



WARNING


Before attempting to inspect or repair the equipment, make sure all air to the chopper is disconnected.

- 1. Disconnect air to the chopper.
- 2. Remove the chopper cover by turning the cover stud.
- 3. Loosen the screw holding the idler roll.

Note The idler role is also called the sleeve and bearing.

4. Loosen the screw holding the rubber roll and mandrel.

Note The rubber roll should exert just enough pressure against the blade rotor to turn the rotor. You should not be able to turn the rubber roll while holding the rotor.

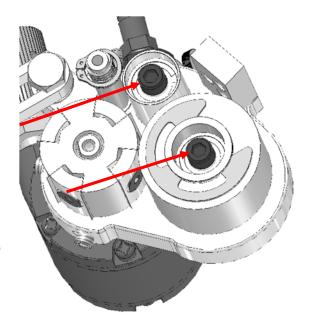

Note The rubber roll may not be perfectly round. Adjust to the middle point rather than the high or low point.

5. Adjust the idler roll and the rubber roll until the idler roll is barely touching the rubber roll.

Note The idler roll should be just close enough to the rubber roll to pull the fiberglass into the chopper without pulling the glass too tightly.

- 6. Turn the roller eccentric nuts clockwise to tighten.
- 7. Attach the cover to the chopper, aligning the base plate's notch with the boss in the cover.
- 8. Twist the cover stud to lock the cover in place.



WARNING

Never operate the chopper without the cover installed or personal injury may result.

Reinstall Glass

- 1. Thread the glass strands through the brake guides on the boom.
- 2. Bend the end of a strand of glass to form a small loop.
- 3. Insert the loop into a hole in the chopper cover.



4. **Carefully** insert your finger into the chopper and rotate the rubber roll by placing your finger under the roll and pulling toward you.

This pulls the glass strand into position between the rubber roll and the blade rotor assembly.

Note

Using two strands of glass results in a better glass pattern and less wear on the chopper unit.


Lubricating Chopper Air Motor



CAUTION

Lubricate the air motor every 4 hours during operation to prevent damage to the equipment.

- 1. Remove the hose fitting that attaches the flexible conduit to the chopper.
- 2. Completely close the blower thumbscrew to prevent oil from entering the interior of the chopper.
- 3. Insert 1 to 2 drops of chopper motor oil into the hose fitting
- 4. Reconnect the hose fitting.
- 5. Reconnect the air supply.
- 6. Operate the chopper briefly with the blower thumbscrew closed.
- 7. Reopen the blower thumbscrew to the desired setting for normal operations.

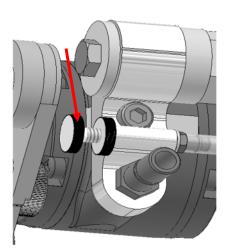



Disassembling Cutter



WARNING

Before attempting to inspect or repair the equipment, make sure all air to the chopper is disconnected.

- 1. Remove the air line from the back of the chopper.
- 2. Unscrew the cover nut and remove the cover.
- 3. Use a wrench to loosen the socket cap screw holding the rubber roll assembly enough to slide the slide adjust nut from the slot in the base plate and remove.
- 4. Remove the E-ring from the rubber roll and slide the rubber roll off the mandrel assembly.
- 5. Loosen the two socket up point set screws and slide the rotor assembly off of the air motor shaft.



WARNING

BLADES ARE SHARP. To prevent injury, use caution when working with the rotor.



6. Loosen the socket flat head screws used to secure the wedge inserts and remove the chopper blades from the rotor assembly.



Assembling Cutter

- 1. Insert chopper blades between the rotor hub and wedge insert, with the back edge of the blade bottomed against the rotor.
- 2. Align the edges of the blade with the end of the rotor hub.
- 3. Tighten the socket flat head screw in the wedge insert to secure the blades in place.
- 4. Wipe a small amount of grease on the air motor shaft.
- 5. Slide the wedge rotor assembly onto the air motor shaft so that the set screws in the rotor hub ride on the flat of the chopper motor shaft.

Note The rotor must be positioned on the air motor so it aligns with the rubber roll.

- 6. Press the rubber roll onto the mandrel assembly.
- 7. Secure the rubber roll by inserting the E-ring into the groove on the mandrel.
- 8. Insert the mandrel assembly into the top of the T-slot on the base plate.
- 9. Align the slide adjust nut with the T-slot.
- 10. Slide the rubber roll assembly toward the wedge rotor assembly and tighten the socket cap screw.



Adjusting Cutter



CAUTION

Before adjusting the chopper the resin, catalyst, and solvent should be pressurized and operating correctly. Refer to your system's operating instructions before proceeding.

Adjust Rubber Roll

- 1. Slightly loosen the socket cap screw just enough so the rubber roll assembly will slide into the T-slot.
- 2. Apply slight pressure on the rubber roll assembly to the wedge rotor assembly and tighten the socket head cap screw.

Note When making this adjustment, the rubber roll must be in contact with the chopper blade.

Adjust Idler

3. Slightly loosen the socket head cap screw just enough so the idler assembly will slide into the T-slot.



4. Slide the idler (a.k.a. the sleeve and bearing) until it just contacts the rubber roll.


Note Proper adjustment has the idler assembly touching the rubber roll but still able to rotate with minimal effort.

Parts Drawings

The following drawings are included for your reference:

| Parts Drawings | |
|------------------|--|
| Part Number | Description |
| VRC-1000 | SuperPro II FIT Roving Cutter Assy |
| VRC-1000-CNP | Roving Cutter Assembly |
| VRC-1000-TLN-I | Chopper For Internal Mix Talon Gun |
| VRC-1000-TLN-IF | Chopper For Internal Mix FIT Talon Gun |
| VRC-1000-TLN-X | Chopper For External Mix Talon Gun |
| 5103-01-01 | SuperPro Chopper Assembly – Short Chute |
| VHTC-1000 | SuperPro Chopper Assembly – High Torque Motor |
| VHTC-1000-TLN-I | SuperPro Chopper Assy - High Torque - Internal Mix Talon Gun |
| VHTC-1000-TLN-IF | SuperPro Chopper Assy – High Torque – Internal Mix FIT Talon Gun |
| VHTC-1000-TLN-X | SuperPro Chopper Assy – High Torque – External Mix Talon Gun |
| VRC-1000-80-MK | Mounting Kit – 80, Duramax Guns |
| VRC-1000-ATC-MK | Mounting Kit – ATC Chopper Gun |
| VRC-1000-VPR-MK | Mounting Kit – Viper & Titan Guns |
| VRC-TLN-I-CK | Conversion Kit – High Torque Motor |
| VRC-TLN-IF-CK | Conversion Kit - Talon Internal Mix Chopper |
| VRC-TLN-X-CK | Conversion Kit – Talon External Mix Chopper |
| VRC-TM-100 | Throttle Muffler Assembly |
| VRC-TM-200 | Throttle Muffler Assembly - Large |
| VRC-TM-200-HTM | Throttle Muffler Assembly - Large - High Torque Motor |
| 5103-03-01 | 8 Blade Wedge Rotor – SuperPro Chopper |
| 5103-04-01 | 6 Blade Wedge Rotor – SuperPro Chopper |
| 00952-1 | Chopper Air Motor Repair Kit – for 8402-1-1 |



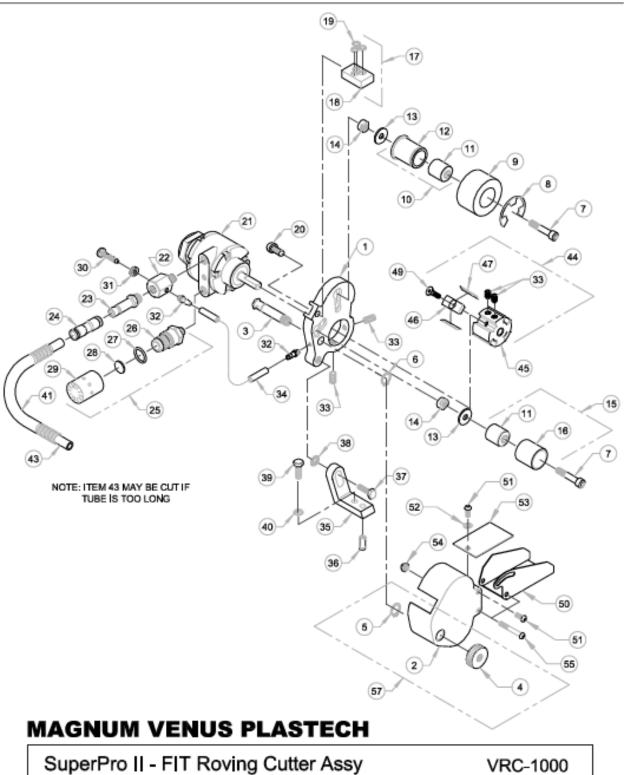

REV. C = ITEM 43 WAS CITY 1 08/04/08 BT2
REV. D = CLARIFIED BOX FOR ITEM 57 01/18/12 BT2
REV. E = UPDATED SEVERAL NUMBERS TO ALPHA-MUMERIC, ADDED NOTE FOR ITEM 43 08/09/12 BT2
REV. F = ITEM 47A WAS 92/10-1-100 AND 47B WAS 92/10-1-1000 02/27/14 BT2



DESCRIPTION

MANDREL SPA

GUIDE BLOCK

GUIDE

60 DURO RUBBER ROLL

SPEED CONTROL ASSY

CHOPPER COVER ASSY.

8-BLADE WEDGE ROTOR ASSY

BLADES (PACKAGE OF 100) BLADES (PACKAGE OF 1000)

SLEEVE W/BEARING

QTY

3

SuperPro | - F|T Roving Cutter Assy VRC-1000 PARTS LIST

OPTIONAL PARTS AND ASSEMBLIES TEM DESCRIPTION PART NO. QTY TEM PART NO. 5103-1-1 BASE PLATE 1 2 5103-13-1 CHOPPER COVER 9B 5103-6-2 5103-2-01 AIR STUD SPA 3 5103-5-01 4 5103-14-1 COVER NUT 5103-7-01 15 BOS-3056 SNAP RING DIA 1/2" 5 1 18 5103-3-1 SNAP RING DIA 3/8" 6 7205-2-6 19 9209-1-1 F-CS-04C-20 SOCKET HD CAP SCREW 7 2 5103-02-01 25 7205-3-31 E-RING 8 44 5103-03-01 9 5103-6-1 70 DURO RUBBER ROLL 47A 5103-8-100 RC-1018A SEALED BALL BEARING 11 47B 5103-8-1000 12 5103-5-1 MANDREL 57 VRC-1001 13 5103-18-1 SPACER WASHER 14 5103-4-1 SLIDE ADJ NUT 16 5103-7-1 SLEEVE 1 17 5103-3-01 ROVING GUIDE SPA 20 F-CS-04C-08 1 SOCKET HD CAP SCREW 21 8402-1-1 AIR MOTOR 22 5103-9-1 CHOPPER AIR VALVE 23 5103-12-1 OILER DISCONNECT 24 7701-6-8 PUSH-IN FITTING SPEED CONTROL HOUSING 26 5103-19-1 27 O-V-016 SPEED CONTROL SEAL 28 5103-20-1 5103-21-1 SPEED CONTROL COVER 29 30 5103-11-1 THUMBSCREW 31 5103-10-1 LOCK RING BARB FITTING 32 7701-6-3 2 33 7102-11-6 SOCKET CUP POINT SET SCREW 34 09073 .33 FT URETHANE TUBING 1/4" OD 35 5103-16-1 MOUNT BRACKET 38 5103-17-1 ECCENTRIC STUD 37 F-HB-05C-16 1 HEX HD BOLT 38 7202-5-10 INTERNAL STAR WASHER HEAVY DUTY 1 39 F-HB-04C-12 HEX HEAD BOLT LOCK WASHER 40 F-SW-04 5103-15-01 CHOPPER CONDUIT 41 1.17 FT 3/8" POLY TUBING BLACK (14 INCHES) 43 00004 45 5103-28-1 ROTOR HUB 8-BLADE 1 46 5103-29-1 WEDGE INSERT 8-BLADE 47 5103-8-1 CHOPPER BLADE F-FHCS-1024-06 4 SOCKET FLAT HEAD SCREW 49 50 5103-24-1 CHOPPER CHUTE 51 F-BHCS-1024-06 2 SOCKET BUTTON HEAD SCREW 1 F-SW-1024 52 LOCK WASHER 53 5103-25-1 TOP DEFLECTOR 54 F-LN-1024 NYLOCK HEX NUT 1 1

REPAIR KIT

DESCRIPTION PART NO.


7102-16-28

6702-03-01 ROVING CUTTER REPAIR KIT

SOCKET BUTTON HEAD SCREW



55

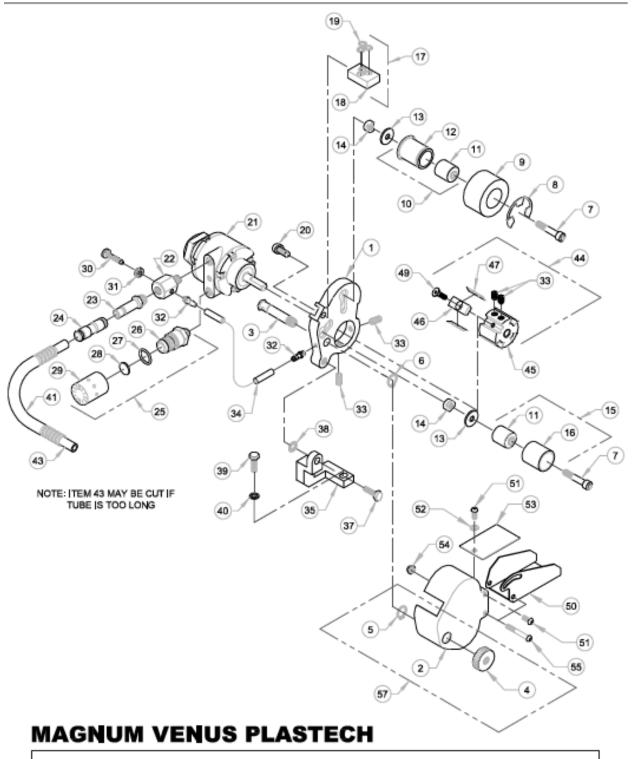

Roving Cutter Assembly

VRC-1000-CNP

REV. A - CLARIFIED BOX FOR ITEM 57 01/19/12 BT2 REV. B - ADDED NOTE FOR ITEM 43 08/09/12 BT2 REV. C - ITEM 47A WAS 9210-1-100 AND ITEM 47B WAS 9210-1-1000 02/27/14 BT2



60 DURO RUBBER ROLL

SLEEVE WITH BEARING

SPEED CONTROL ASSEMBLY 8 BLADE WEDGE ROTOR ASSY. BLADES (PACKAGE OF 100) BLADES (PACKAGE OF 1000)

Roving Cutter Assy VRC-1000-CNP PARTS LIST


| | PARIS | LIST | | | | | |
|-----|-------------|---------|----------------------------|------|-------------|-----|------------------|
| TEM | PART NO. | QTY | DESCRIPTION | OPT | IONAL PART | SAN | D ASSEMBLIES |
| 1 | 5103-1-1 | 1 | BASE PLATE | ITEM | PART NO. | QTY | DESCRIPTION |
| 2 | 5103-13-1 | 1 | CHOPPER COVER | 9B | 5103-6-2 | 1 | 60 DURO RUBBER F |
| 3 | 5103-2-01 | 1 | AIR STUD SPA | 10 | 5103-5-01 | 1 | MANDREL SPA |
| 4 | 5103-14-1 | 1 | COVER NUT | 15 | 5103-7-01 | 1 | SLEEVE WITH BEAR |
| 5 | BOS-3056 | 1 | SNAP RING DIA 1/2" | 18 | 5103-3-1 | i | GUIDE BLOCK |
| 6 | 7205-2-6 | 1 | SNAP RING DIA 3/8" | 19 | 9209-1-1 | 3 | GUIDE |
| 7 | F-CS-04C-20 | 2 | CAP SCREW | 25 | 5103-02-01 | 1 | SPEED CONTROL A |
| 8 | 7205-3-31 | 1 | E-RING | 44 | 5103-02-01 | i | 8 BLADE WEDGE R |
| 9 | 5103-6-1 | 1 | 70 DURO RUBBER ROLL | 47A | 5103-8-100 | i | BLADES (PACKAGE |
| 11 | RC-1018A | 2 | BEARING | 47B | 5103-8-1000 | i | BLADES (PACKAGE |
| 12 | 5103-5-1 | 1 | MANDREL | 57 | VRC-1001 | i | COVER ASSEMBLY |
| 13 | 5103-18-1 | 2 | SPACER WASHER | 31 | VICG- 1001 | | COVER ADDEMBE |
| 14 | 5103-4-1 | 2 | SLIDE ADJUSTMENT NUT | | | | |
| 16 | 5103-7-1 | ĩ | SLEEVE | | | | |
| 17 | 5103-3-01 | 1 | ROVING GUIDE SPA | | | | |
| 20 | F-CS-04C-08 | i | CAP SCREW | | | | |
| 21 | 8402-1-1 | i | AIR MOTOR | | | | |
| 22 | 5103-9-1 | i | CHOPPER AIR VALVE | | | | |
| 23 | 5103-12-1 | 1 | OIL DISCONNECT | | | | |
| 24 | 7701-6-8 | i | PUSH-IN FITTING | | | | |
| 26 | 5103-19-1 | i | SPEED CONTROL HOUSING | | | | |
| 27 | O-V-016 | i | O-RING | | | | |
| 28 | 5103-20-1 | i | SPEED CONTROL SEAL | | | | |
| 29 | 5103-20-1 | i | SPEED CONTROL COVER | | | | |
| 30 | 5103-21-1 | i | THUMBSCREW | | | | |
| 31 | 5103-10-1 | i | LOCK RING | | | | |
| 32 | 7701-6-3 | 2 | BARB FITTING | | | | |
| 33 | 7102-11-6 | 4 | SET SCREW | | | | |
| 34 | 09073 | .33 FT | 1/4" TUBING | | | | |
| 35 | GNP-1065-M | 1 | MOUNT BRACKET | | | | |
| 37 | F-HB-05C-16 | i | HEX BOLT | | | | |
| 38 | 7202-5-10 | 1 | INTERNAL STAR WASHER | | | | |
| 39 | F-HB-04C-12 | i | HEX BOLT | | | | |
| 40 | F-FW-04-SAE | - | FLAT WASHER | | | | |
| 41 | 5103-15-01 | i | CHOPPER CONDUIT | | | | |
| 43 | | 1.17 FT | 3/8" POLY TUBE (14 INCHES) | | | | |
| 45 | 5103-28-1 | 1 | ROTOR HUB 8-BLADE | | | | |
| 46 | 5103-29-1 | 4 | WEDGE INSERT 8-BLADE | | | | |
| 47 | 5103-25-1 | 8 | CHOPPER BLADE | | | | |
| 49 | F-FHCS-1024 | | FLAT HEAD CAP SCREW | | | | |
| 50 | GNP-1068 | 1 | CHOPPER CHUTE | | | | |
| 51 | F-BHCS-1024 | - | BUTTON HEAD CAP SCREW | | | | |
| 52 | F-SW-1024 | 1 | LOCK WASHER | | | | |
| 53 | 5103-25-1 | 1 | TOP DEFLECTOR | | | | |
| 54 | F-LN-1024 | 1 | NYLOCK HEX NUT | | | | |
| 55 | 7102-16-28 | i | BUTTON HEAD CAP SCREW | | | | |
| 99 | r 102-10-20 | 1 | BUT TON HEAD CAP SCREW | | | | |

REPAIR KIT

PART NO. DESCRIPTION

6702-03-01 ROVING CUTTER REPAIR KIT



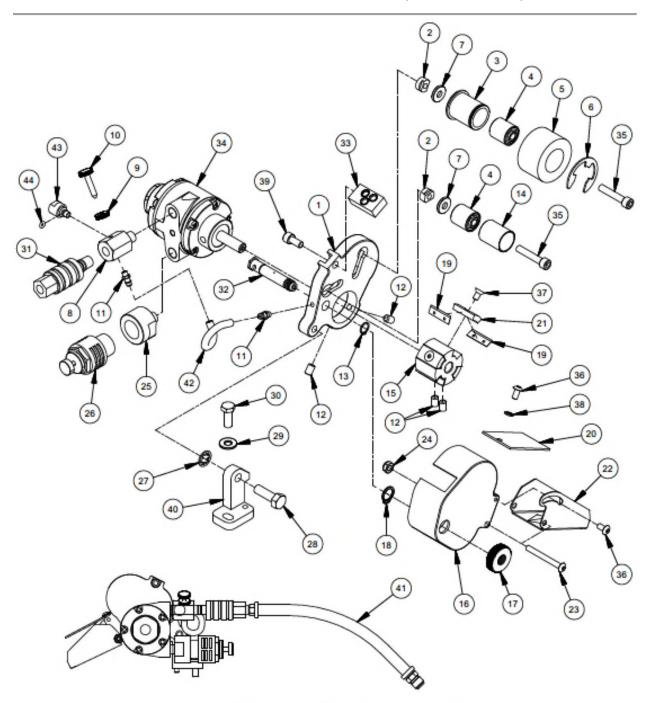

| CHOPPER FOR INTERNAL MIX TALON GUN VRC-1000-T |
|---|
|---|

REV: C 10/16/2014 SHEET 1 / 2 7/3/2013




| | | Pai | rts List |
|------|----------------|--------|------------------------------|
| ITEM | PART NUMBER | QTY | DESCRIPTION |
| 1 | 5103-1-1 | 1 | BASE PLATE |
| 2 | 5103-4-1 | 2 | SLIDE ADJUSTING NUT |
| 3 | 5103-5-1 | 1 | RUBBER ROLL MANDREL |
| 4 | RC-1018A | 2 | BEARING |
| 5 | 5103-6-1 | 1 | CHOPPER RUBBER ROLL |
| 6 | 7205-3-31 | 1 | E-RING |
| 7 | 5103-18-1 | 2 | SPACER |
| 8 | VRC-1016 | 1 | CHOPPER AIR VALVE |
| 9 | 5103-10-1 | 1 | LOCK RING |
| 10 | 5103-11-1 | 1 | THUMB SCREW |
| 11 | 7701-6-3 | 2 | 10-32 BARBED FITTING |
| 12 | 7102-11-6 | 4 | SET SCREW |
| 13 | 7205-2-6 | 1 | SNAP RING |
| 14 | 5103-7-1 | 1 | BEARING SLEEVE |
| 15 | 5103-28-1 | 1 | ROTOR HUB 8-BLADE |
| 16 | 5103-13-1 | 1 | CHOPPER COVER |
| 17 | 5103-14-1 | 1 | COVER NUT |
| 18 | 7205-2-8 | 1 | RETAINING RING |
| 19 | 5103-8-1 | 8 | CHOPPER BLADE |
| 20 | 5103-25-1 | 1 | TOP DEFLECTOR |
| 21 | 5103-29-1 | 4 | WEDGE INSERT 8-BLADE |
| 22 | 5103-24-1 | 1 | CHOPPER CHUTE |
| 23 | 7102-16-28 | 1 | BUTTON HEAD CAP SCREW |
| 24 | F-LN-1024 | 1 | NYLOCK NUT |
| 25 | VRC-2014 | 1 | ADAPTER |
| 26 | VRC-TM-2 | 1 | THROTTLE MUFFLER |
| 27 | 7202-5-10 | 1 | STAR WASHER |
| 28 | F-HB-05C-16 | 1 | HEX BOLT |
| 29 | F-FW-04-SAE | 1 | FLAT WASHER SAE |
| 30 | F-HB-04C-12 | 1 | 1/4 HEX BOLT |
| 31 | RC-1007 | 1 | VALVE |
| 32 | 5103-2-01 | 1 | AIR STUD |
| 33 | 5103-3-01 | 1 | ROVING GUIDE |
| 34 | 8402-1-1 | 1 | AIR MOTOR |
| 35 | F-CS-04C-20 | 2 | CAP SCREW |
| 36 | F-BHCS-1024-06 | 2 | BUTTON HEAD CAP SCREW |
| 37 | F-FHCS-1024-06 | 4 | FLAT HEAD COUNTER SUNK SCREW |
| 38 | F-SW-1024 | 1 | LOCK WASHER |
| 39 | F-CS-04C-08 | 1 | CAP SCREW |
| 40 | TLN-1060-01 | 1 | CHOPPER BRACKET |
| 41 | RC-1084 | 1 | HOSE |
| 42 | 09073 | .33 FT | TUBE |
| 43 | VRC-1017 | 1 | OIL PORT PLUG |
| 44 | O-B-006 | 1 | O-RING |

CHOPPER FOR INTERNAL MIX TALON GUN VRC-1000-TLN-I

REV: C 10/16/2014 SHEET 2 / 2 7/3/2013



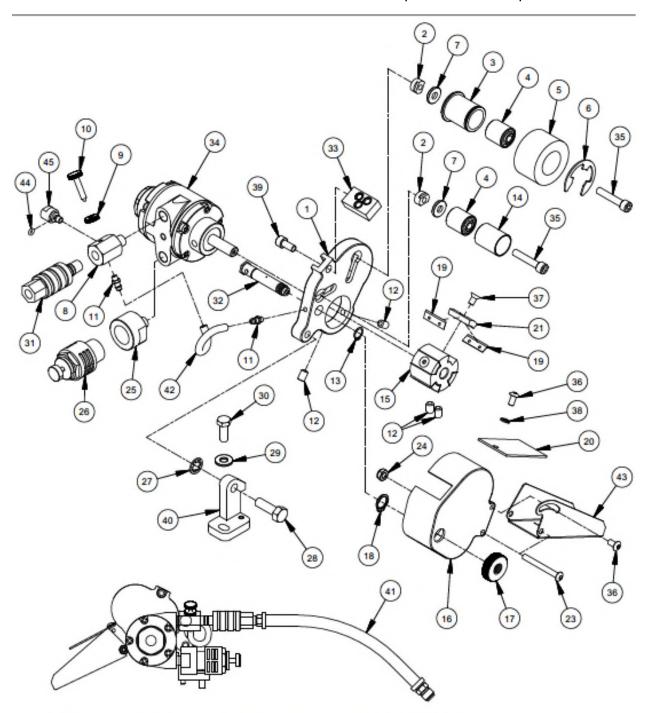

| CHOPPER FOR INTERNAL MIX FIT TALON GUN | VRC-1000-TLN-IF |
|--|-----------------|
| | |

REV: C 10/16/2014 SHEET 1 / 2 7/3/2013




| | | | ts List |
|------|----------------|--------|------------------------------|
| ITEM | PART NUMBER | QTY | DESCRIPTION |
| 1 | 5103-1-1 | 1 | BASE PLATE |
| 2 | 5103-4-1 | 2 | SLIDE ADJUSTING NUT |
| 3 | 5103-5-1 | 1 | RUBBER ROLL MANDREL |
| 4 | RC-1018A | 2 | BEARING |
| 5 | 5103-6-1 | 1 | CHOPPER RUBBER ROLL |
| 6 | 7205-3-31 | 1 | E-RING |
| 7 | 5103-18-1 | 2 | SPACER |
| 8 | VRC-1016 | 1 | CHOPPER AIR VALVE |
| 9 | 5103-10-1 | 1 | LOCK RING |
| 10 | 5103-11-1 | 1 | THUMB SCREW |
| 11 | 7701-6-3 | 2 | 10-32 BARBED FITTING |
| 12 | 7102-11-6 | 4 | SET SCREW |
| 13 | 7205-2-6 | 1 | SNAP RING |
| 14 | 5103-7-1 | 1 | BEARING SLEEVE |
| 15 | 5103-28-1 | 1 | ROTOR HUB 8-BLADE |
| 16 | 5103-13-1 | 1 | CHOPPER COVER |
| 17 | 5103-14-1 | 1 | COVER NUT |
| 18 | 7205-2-8 | 1 | RETAINING RING |
| 19 | 5103-8-1 | 8 | CHOPPER BLADE |
| 20 | 5103-25-1 | 1 | TOP DEFLECTOR |
| 21 | 5103-29-1 | 4 | WEDGE INSERT 8-BLADE |
| 23 | 7102-16-28 | 1 | BUTTON HEAD CAP SCREW |
| 24 | F-LN-1024 | 1 | NYLOCK NUT |
| 25 | VRC-2014 | 1 | ADAPTER |
| 26 | VRC-TM-2 | 1 | THROTTLE MUFFLER |
| 27 | 7202-5-10 | 1 | STAR WASHER |
| 28 | F-HB-05C-16 | 1 | HEX BOLT |
| 29 | F-FW-04-SAE | 1 | FLAT WASHER SAE |
| 30 | F-HB-04C-12 | 1 | 1/4 HEX BOLT |
| 31 | RC-1007 | 1 | VALVE |
| 32 | 5103-2-01 | 1 | AIR STUD |
| 33 | 5103-3-01 | 1 | ROVING GUIDE |
| 34 | 8402-1-1 | 1 | AIR MOTOR |
| 35 | F-CS-04C-20 | 2 | CAP SCREW |
| 36 | F-BHCS-1024-06 | 2 | BUTTON HEAD CAP SCREW |
| 37 | F-FHCS-1024-06 | 4 | FLAT HEAD COUNTER SUNK SCREV |
| 38 | F-SW-1024 | 1 | LOCK WASHER |
| 39 | F-CS-04C-08 | 1 | CAP SCREW |
| 40 | TLN-1060-01 | 1 | CHOPPER BRACKET |
| 41 | RC-1084 | 1 | HOSE |
| 42 | 09073 | .33 FT | TUBE |
| 43 | 71320-1 | 1 | CHOPPER CHUTE |
| 44 | O-B-006 | 1 | O-RING |
| | U-D-000 | 1 | IO-KTING |

CHOPPER FOR INTERNAL MIX FIT TALON GUN VRC-1000-TLN-IF

REV: C 10/16/2014 SHEET 2 / 2 7/3/2013



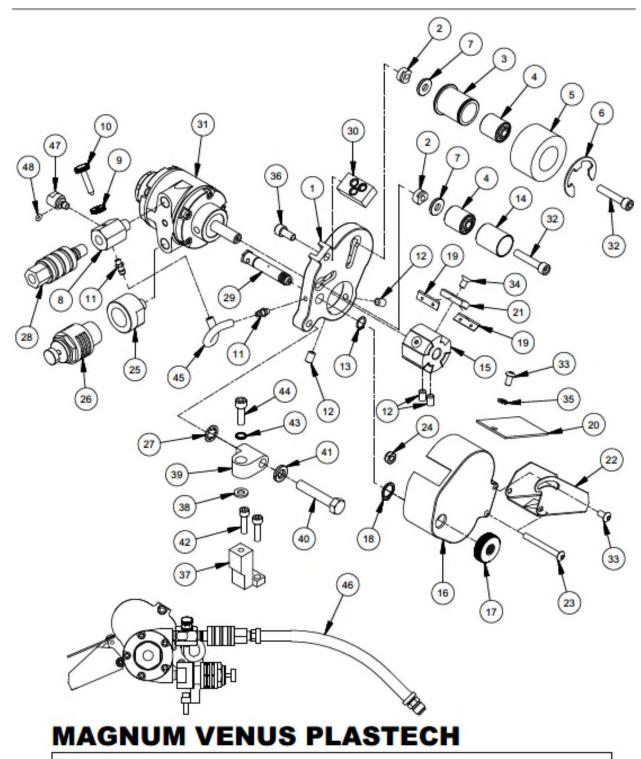

CHOPPER FOR EXTERNAL MIX TALON GUN VRC-1000-TLN-X

REV: C 10/16/2014 SHEET 1 / 2 7/10/2013




| | DADE 44 14 15 15 15 | | ts List | | | |
|-----|---------------------|--------|------------------------------|--|--|--|
| TEM | PART NUMBER | QTY | DESCRIPTION | | | |
| 1 | 5103-1-1 | 1 | BASE PLATE | | | |
| 2 | 5103-4-1 | 2 | SLIDE ADJUSTING NUT | | | |
| 3 | 5103-5-1 | 1 | RUBBER ROLL MANDREL | | | |
| 4 | RC-1018A | 2 | BEARING | | | |
| 5 | 5103-6-1 | 1 | CHOPPER RUBBER ROLL | | | |
| 6 | 7205-3-31 | 1 | E-RING | | | |
| 7 | 5103-18-1 | 2 | SPACER | | | |
| 8 | VRC-1016 | 1 | CHOPPER AIR VALVE | | | |
| 9 | 5103-10-1 | 1 | LOCK RING | | | |
| 10 | 5103-11-1 | 1 | THUMB SCREW | | | |
| 11 | 7701-6-3 | 2 | 10-32 BARBED FITTING | | | |
| 12 | 7102-11-6 | 4 | SET SCREW | | | |
| 13 | 7205-2-6 | 1 | SNAP RING | | | |
| 14 | 5103-7-1 | 1 | BEARING SLEEVE | | | |
| 15 | 5103-28-1 | 1 | ROTOR HUB 8-BLADE | | | |
| 16 | 5103-13-1 | 1 | CHOPPER COVER | | | |
| 17 | 5103-14-1 | 1 | COVER NUT | | | |
| 18 | 7205-2-8 | 1 | RETAINING RING | | | |
| 19 | 5103-8-1 | 8 | CHOPPER BLADE | | | |
| 20 | 5103-25-1 | 1 | TOP DEFLECTOR | | | |
| 21 | 5103-29-1 | 4 | WEDGE INSERT 8-BLADE | | | |
| 22 | 5103-24-1 | 1 | CHOPPER CHUTE | | | |
| 23 | 7102-16-28 | 1 | BUTTON HEAD CAP SCREW | | | |
| 24 | F-LN-1024 | 1 | NYLOCK NUT | | | |
| 25 | VRC-2014 | 1 | ADAPTER | | | |
| 26 | VRC-TM-2 | 1 | THROTTLE MUFFLER | | | |
| 27 | 7202-5-10 | 1 | STAR WASHER | | | |
| 28 | RC-1007 | 1 | VALVE | | | |
| 29 | 5103-2-01 | 1 | AIR STUD | | | |
| 30 | 5103-3-01 | 1 | ROVING GUIDE | | | |
| 31 | 8402-1-1 | 1 | AIR MOTOR | | | |
| 32 | F-CS-04C-20 | 2 | CAP SCREW | | | |
| 33 | F-BHCS-1024-06 | 2 | BUTTON HEAD CAP SCREW | | | |
| 34 | F-FHCS-1024-06 | 4 | FLAT HEAD COUNTER SUNK SCREW | | | |
| 35 | F-SW-1024 | 1 | LOCK WASHER | | | |
| 36 | F-CS-04C-08 | 1 | CAP SCREW | | | |
| 37 | TLN-2040 | 1 | CHOPPER MOUNT | | | |
| 38 | RC-1034 | 1 | NYLON WASHER | | | |
| 39 | TLN-2042 | 1 | PIVOT PIECE | | | |
| 40 | F-HB-05C-28 | 1 | HEX BOLT | | | |
| 41 | F-SW-05 | 1 | LOCK WASHER | | | |
| 42 | F-CS-1224-12 | 2 | CAP SCREW | | | |
| 43 | F-SBW-04 | 1 | WASHER | | | |
| 44 | F-CS-04C-12 | 1 | CAP SCREW | | | |
| 45 | 09073 | .33 FT | TUBE | | | |
| 46 | RC-1084 | 1 | HOSE | | | |
| 47 | VRC-1017 | 1 | OIL PORT PLUG | | | |
| 48 | O-B-006 | 1 | O-RING | | | |

CHOPPER FOR EXTERNAL MIX TALON GUN VRC-1000-TLN-X REV: C 10/16/2014



7/10/2013 SHEET 2 / 2

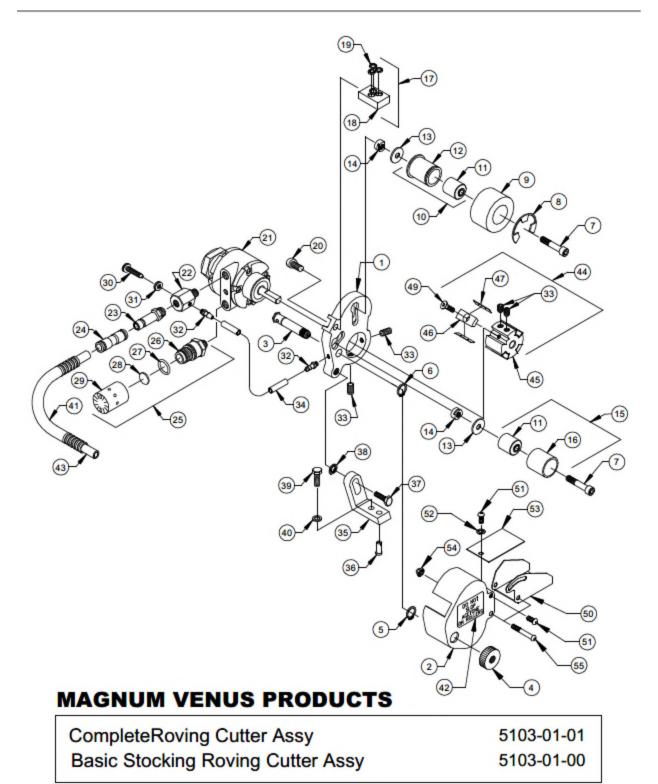

REV. C = ADDED 5103-01-00 TO DWG. 5/20/02 JEM



Common assembly Parts For: Roving Cutter Assy 5103-01-01

ASSOCIATED PARTS AND ASSEMBLIES


| c Stock | ing Roving | Cutter | Assy 5103-01-00 | ASSO | CIATED FAI | NISA | ND ASSEMBLIES |
|---------|------------------------------|--------|-------------------------|------|-------------|-------|--------------------------|
| o otoci | | SLIST | | ITEM | PART NO. | QTY | DESCRIPTION |
| ITEM | PART NO. | QTY | DESCRIPTION | 9B | 5103-6-2 | 1 | 60 DURO RUBBER ROLL |
| 1 | 5103-1-1 | 1 | BASE PLATE | 10 | 5103-5-01 | 1 | MANDREL SPA |
| 2 | 5103-13-1 | 1 | CHOPPER COVER | 15 | 5103-7-01 | 1 | SLEEVE W/BEARING |
| 3 | 5103-2-01 | 1 | AIR STUD SPA | 18 | 5103-3-1 | 1 | GUIDE BLOCK |
| 4 | 5103-14-1 | 1 | COVER NUT | 19 | 9209-1-1 | 3 | GUIDE |
| 5 | 7205-2-8 | 1 | SNAP RING DIA 1/2" | 25 | 5103-02-01 | 1 | SPEED CONTROL ASSY |
| 6 | 7205-2-6 | 1 | SNAP RING DIA 3/8" | 44 | 5103-03-01 | 1 | 8-BLADE WEDGE RTR ASSY |
| 7 | 7102-2-20 | 2 | SOCKET HD CAP SCREW | 47A | 9210-1-100 | 1 | BLADES (PKG OF 100) |
| 8 | 7205-3-31 | 1 | E-RING | 47B | 9210-1-1000 | 1 | BLADES (PKG OF 1000) |
| 9 | 5103-6-1 | 1 | 70 DURO RUBBER ROLL | 50B | 5103-24-1 | 1 | CHOPPER CHUTE |
| 11 | 9202-2-1 | 2 | SEALED BALL BEARING | | | | |
| 12 | 5103-5-1 | 1 | MANDREL | | | | |
| 13 | 5103-18-1 | 2 | SPACER WASHER | | | | |
| 14 | 5103-4-1 | 2 | SLIDE ADJ NUT | | | | |
| 16 | 5103-7-1 | 1 | SLEEVE | | | | |
| 17 | 5103-3-01 1 ROVING GUIDE SPA | | | | - | DAID | KIT |
| 20 | 7102-2-8 | 1 | SOCKET HD CAP SCREW | | RE | PAIR | KH |
| 21 | 8402-1-1 | 1 | AIR MOTOR | | PART NO. | DESCR | RIPTION |
| 22 | 5103-9-1 | 1 | CHOPPER AIR VALVE | | | | |
| 23 | 5103-12-1 | 1 | OILER DISCONNECT | | 6702-03-01 | RC151 | ROVING CUTTER REPAIR KIT |
| 24 | 7701-6-8 | 1 | PUSH-IN FITTING | | | | |
| 26 | 5103-19-1 | 1 | SPEED CONTROL HOUSING | G | | | |
| 27 | 7301-3-016 | 1 | O-RING | | | | |
| 28 | 5103-20-1 | 1 | SPEED CONTROL SEAL | | | | |
| 29 | 5103-21-1 | 1 | SPEED CONTROL COVER | | | | |
| 30 | 5103-11-1 | 1 | THUMBSCREW | | | | |
| 31 | 5103-10-1 | 1 | LOCK RING | | | | |
| 32 | 7701-6-3 | 2 | BARB FITTING | | | | |
| 33 | 7102-11-6 | 4 | SOCKET CUP POINT SET S | CREW | | | |
| 34 | 09073 | .33ft | URETHANE TUBING 1/4" OF | D | | | |
| 41 | 5103-15-01 | 1 | CHOPPER CONDUIT | | | | |
| 42 | 6701-5-EN | 1 | LABEL | | | | |
| 43 | 00004 | 1 | 3/8" POLY TUBING BLACK | | | | |
| 45 | 5103-28-1 | 1 | ROTOR HUB 8-BLADE | | | | |
| 46 | 5103-29-1 | 4 | WEDGE INSERT 8-BLADE | | | | |
| 47 | 5103-8-1 | 8 | CHOPPER BLADE | | | | |
| 49 | 7102-13-6 | 4 | SOCKET FLAT HEAD SCRE | W | | | |
| | | | | | | | |

Roving Cutter Assy 5103-01-01

| | _ | _ | | | |
|------|------------|-----|---------------------------------|--|--|
| ITEM | PART NO. | QTY | DESCRIPTION | | |
| * | 5103-01-00 | 1 | BASIC STOCK CHOPPER ASSY | | |
| 50 | 5103-23-1 | 1 | CHOPPER CHUTE | | |
| 51 | 7102-16-6 | 2 | SOCKET BUTTON HEAD SCREW | | |
| 52 | 7202-6-10 | 1 | LOCK WASHER | | |
| 53 | 5103-25-1 | 1 | TOP DEFLECTOR | | |
| 54 | 7201-11-10 | 1 | NYLOCK HEX NUT | | |
| 55 | 7102-16-28 | 1 | SOCKET BUTTON HEAD SCREW | | |
| 35 | 5103-16-1 | 1 | MOUNT BRACKET | | |
| 36 | 5103-17-1 | 1 | ECCENTRIC STUD | | |
| 37 | 7101-7-8 | 1 | HEX HD BOLT | | |
| 38 | 7202-5-10 | 1 | INTERNAL STAR WASHER HEAVY DUTY | | |
| 39 | 7101-1-6 | 1 | HEX HEAD BOLT | | |
| 40 | 7202-4-8 | 1 | LOCK WASHER | | |
| | | | | | |

* 5103-01-00 ASSEMBLY IS FOR STOCK ONLY, (NOT RESALE). SEE 5103-01-01 ASSY ABOVE FOR SALEABLE ASSEMBLY.



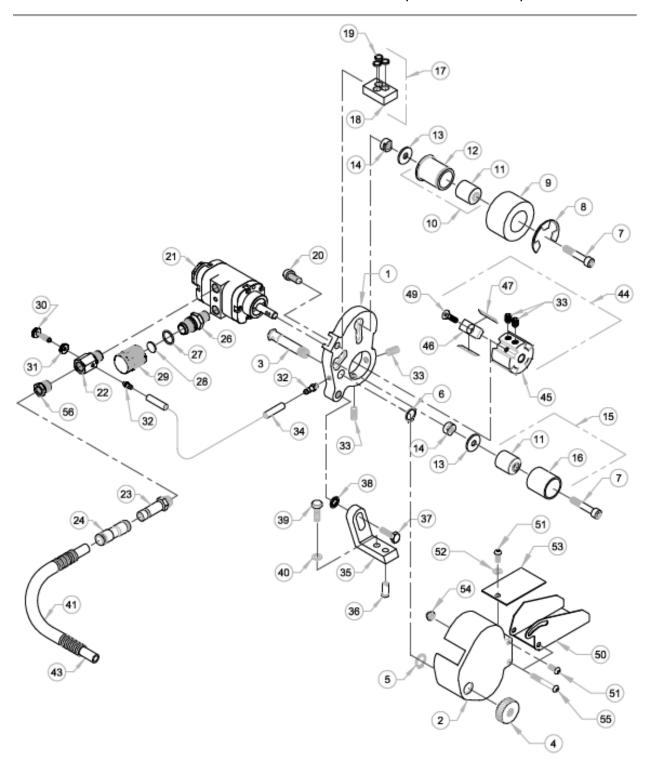

SuperPro II - FIT Roving Cutter Assy

VHTC-1000

REV. 3/20/07 JEM
REV. A - REMOVED ITEM 42 6701-5-EN 08-24-09 BT2
REV. B - PROPERLY ORIENTED INLET AND OUTLET PORTS 10-19-11 BT2



SuperPro || - FIT Roving Cutter Assy VHTC-1000 PARTS LIST


| TEM PART NO. QTY DESCRIPTION OPTIONAL PARTS AND ASSEMBLI | BER ROLL BER ROLL ARING |
|---|--|
| 2 5103-13-1 1 CHOPPER COVER 9B 5103-6-2 1 60 DURO RUBE 3 5103-2-01 1 AIR STUD SPA 9C 07118 1 MOLDED RUBE 4 5103-14-1 1 COVER NUT 10 5103-5-01 1 MANDREL SPA 5 BOS-3056 1 SNAP RING DIA 1/2" 15 5103-7-01 1 SLEEVE W/BEA 6 7205-2-6 1 SNAP RING DIA 3/8" 18 5103-3-1 1 GUIDE BLOCK | BER ROLL ARING GE ROTOR ASSY (AGE OF 100) |
| 3 5103-2-01 1 AIR STUD SPA 9C 07118 1 MOLDED RUBB 4 5103-14-1 1 COVER NUT 10 5103-5-01 1 MANDREL SPA 5 BOS-3056 1 SNAP RING DIA 1/2" 15 5103-7-01 1 SLEEVE W/BEA 6 7205-2-6 1 SNAP RING DIA 3/8" 18 5103-3-1 1 GUIDE BLOCK | BER ROLL ARING GE ROTOR ASSY (AGE OF 100) |
| 3 5103-2-01 1 AIR STUD SPA 9C 07118 1 MOLDED RUBB 4 5103-14-1 1 COVER NUT 10 5103-5-01 1 MANDREL SPA 5 BOS-3056 1 SNAP RING DIA 1/2" 15 5103-7-01 1 SLEEVE W/BEA 6 7205-2-6 1 SNAP RING DIA 3/8" 18 5103-3-1 1 GUIDE BLOCK | BER ROLL ARING GE ROTOR ASSY (AGE OF 100) |
| 4 5103-14-1 1 COVER NUT 10 5103-5-01 1 MANDREL SPA 5 BOS-3056 1 SNAP RING DIA 1/2" 15 5103-7-01 1 SLEEVE W/BEA 6 7205-2-6 1 SNAP RING DIA 3/8" 18 5103-3-1 1 GUIDE BLOCK | ARING GE ROTOR ASSY (AGE OF 100) |
| 5 BOS-3056 1 SNAP RING DIA 1/2" 15 5103-7-01 1 SLEEVE W/BEA 6 7205-2-6 1 SNAP RING DIA 3/8" 18 5103-3-1 1 GUIDE BLOCK | ARING GE ROTOR ASSY (AGE OF 100) |
| 6 7205-2-6 1 SNAP RING DIA 3/8" 18 5103-3-1 1 GUIDE BLOCK | GE ROTOR ASSY (AGE OF 100) |
| | GE ROTOR ASSY (AGE OF 100) |
| 7 F-CS-04C-20 2 SOCKET HD CAP SCREW 19 9209-1-1 3 GUIDE | (AGE OF 100) |
| 10 0200-1-1 0 0010-2 | (AGE OF 100) |
| A STANDAY A MARKET PRINCIPLE POLICE | , |
| | VAGE OF 1000) |
| 12 5103-5-1 1 MANDREL | |
| 13 5103-18-1 2 SPACER WASHER | |
| 14 5103-4-1 2 SLIDE ADJ NUT | |
| 16 5103-7-1 1 SLEEVE | |
| 17 5103-3-01 1 ROVING GUIDE SPA | |
| 20 F-CS-04C-08 1 SOCKET HD CAP SCREW | |
| 21 HTM-4000-CW 1 AIR MOTOR | |
| 22 HTM-4029 1 INLET COUPLING | |
| 23 5103-12-1 1 OILER DISCONNECT | |
| 24 7701-8-8 1 PUSH-IN FITTING | |
| 26 HTM-4025 1 SPEED CONTROL HOUSING | |
| 27 O-V-016 1 O-RING | |
| 28 5103-20-1 1 SPEED CONTROL SEAL | |
| 29 5103-21-1 1 SPEED CONTROL COVER | |
| 30 5103-11-1 1 THUMBSCREW | |
| 31 5103-10-1 1 LOCK RING | |
| 32 7701-6-3 2 BARB FITTING | |
| 33 7102-11-6 4 SOCKET CUP POINT SET SCREW | |
| 34 09073 .33 FT URETHANE TUBING 1/4" OD | |
| 35 5103-16-1 1 MOUNT BRACKET | |
| 36 5103-17-1 1 ECCENTRIC STUD | |
| 37 F-HB-05C-16 1 HEX HD BOLT | |
| 38 7202-5-10 1 INTERNAL STAR WASHER HEAVY DUTY | |
| 39 F-HB-04C-12 1 HEX HEAD BOLT | |
| 40 F-SW-04 1 LOCK WASHER | |
| 41 5103-15-01 1 CHOPPER CONDUIT | |
| 43 00004 1 3/8" POLY TUBING BLACK | |
| 45 5103-28-1 1 ROTOR HUB 8-BLADE | |
| 46 5103-29-1 4 WEDGE INSERT 8-BLADE | |
| 47 5103-8-1 8 CHOPPER BLADE | |
| 49 F-FHCS-1024-06 4 SOCKET FLAT HEAD SCREW | |
| 50 5103-24-1 1 CHOPPER CHUTE | |
| 51 F-BHCS-1024-06 2 SOCKET BUTTON HEAD SCREW | |
| 52 F-SW-1024 1 LOCK WASHER | |
| 53 5103-25-1 1 TOP DEFLECTOR | |
| 54 F-LN-1024 1 NYLOCK HEX NUT | |
| 55 7102-16-28 1 SOCKET BUTTON HEAD SCREW | |
| 56 PF-RB-04-02 1 PIPE BUSHING | |

REPAIR KIT

PART NO. DESCRIPTION

6702-03-01 RC1S1 ROVING CUTTER REPAIR KIT



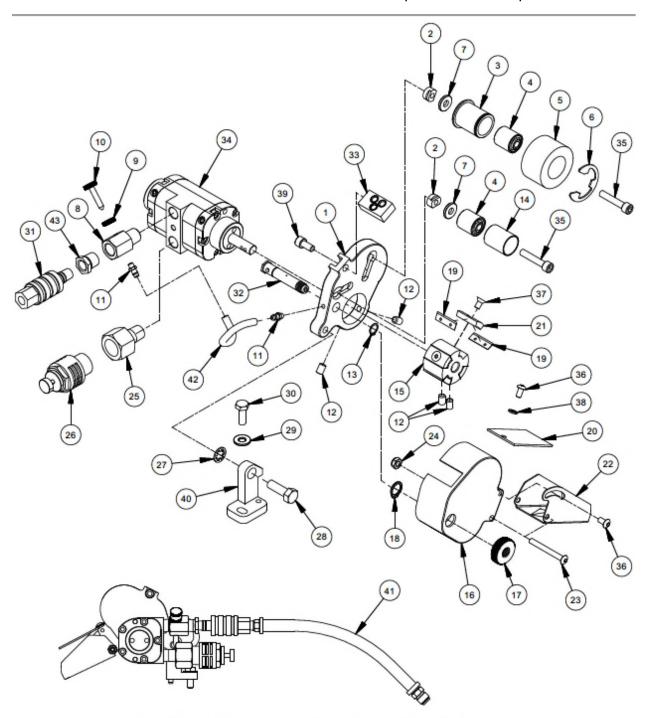

| HIGH TORQUE CHOPPER FOR INTERNAL MIX TALON GUN | VHTC-1000-TLN-I | |
|--|-----------------|-----------|
| REV: | SHEET 1 / 2 | 1/10/2014 |




| | | | Parts List |
|------|----------------|--------|-----------------------------------|
| ITEM | PART NUMBER | QTY | DESCRIPTION |
| 1 | 5103-1-1 | 1 | BASE PLATE |
| 2 | 5103-4-1 | 2 | SLIDE ADJUSTING NUT |
| 3 | 5103-5-1 | 1 | RUBBER ROLL MANDREL |
| 4 | RC-1018A | 2 | BEARING |
| 5 | 5103-6-1 | 1 | CHOPPER RUBBER ROLL |
| 6 | 7205-3-31 | 1 | E-RING |
| 7 | 5103-18-1 | 2 | SPACER |
| 8 | HTM-4029 | 1 | INLET COUPLING |
| 9 | 5103-10-1 | 1 | LOCK RING |
| 10 | 5103-11-1 | 1 | THUMB SCREW |
| 11 | 7701-6-3 | 2 | 10-32 BARBED FITTING |
| 12 | 7102-11-6 | 4 | SET SCREW |
| 13 | 7205-2-6 | 1 | SNAP RING |
| 14 | 5103-7-1 | 1 | BEARING SLEEVE |
| 15 | 5103-28-1 | 1 | ROTOR HUB 8-BLADE |
| 16 | 5103-13-1 | 1 | CHOPPER COVER |
| 17 | 5103-14-1 | 1 | COVER NUT |
| 18 | 7205-2-8 | 1 | RETAINING RING |
| 19 | 5103-8-1 | 8 | CHOPPER BLADE |
| 20 | 5103-25-1 | 1 | TOP DEFLECTOR |
| 21 | 5103-29-1 | 4 | WEDGE INSERT 8-BLADE |
| 22 | 5103-24-1 | 1 | CHOPPER CHUTE |
| 23 | 7102-16-28 | 1 | BUTTON HEAD CAP SCREW |
| 24 | F-LN-1024 | 1 | NYLOCK NUT |
| 25 | VRC-2024 | 1 | ADAPTER |
| 26 | VRC-TM-2 | 1 | THROTTLE MUFFLER |
| 27 | 7202-5-10 | 1 | STAR WASHER |
| 28 | F-HB-05C-16 | 1 | HEX BOLT |
| 29 | F-FW-04-SAE | 1 | FLAT WASHER SAE |
| 30 | F-HB-04C-12 | 1 | 1/4 HEX BOLT |
| 31 | RC-1007 | 1 | VALVE |
| 32 | 5103-2-01 | 1 | AIR STUD |
| 33 | 5103-3-01 | 1 | ROVING GUIDE |
| 34 | HTM-4000-CW | 1 | AIR MOTOR ASSY-CLOCKWISE ROTATION |
| 35 | F-CS-04C-20 | 2 | CAP SCREW |
| 36 | F-BHCS-1024-06 | 2 | BUTTON HEAD CAP SCREW |
| 37 | F-FHCS-1024-06 | 4 | FLAT HEAD COUNTER SUNK SCREW |
| 38 | F-SW-1024 | 1 | LOCK WASHER |
| 39 | F-CS-04C-08 | 1 | CAP SCREW |
| 40 | TLN-1060-01 | 1 | CHOPPER BRACKET |
| 41 | RC-1084 | 1 | HOSE |
| 42 | 09073 | .33 FT | TUBE |
| 43 | PF-RB-04-02 | 1 | PIPE BUSHING |

HIGH TORQUE CHOPPER FOR INTERNAL MIX TALON GUN

VHTC-1000-TLN-I

REV: SHEET 2 / 2 1/10/2014



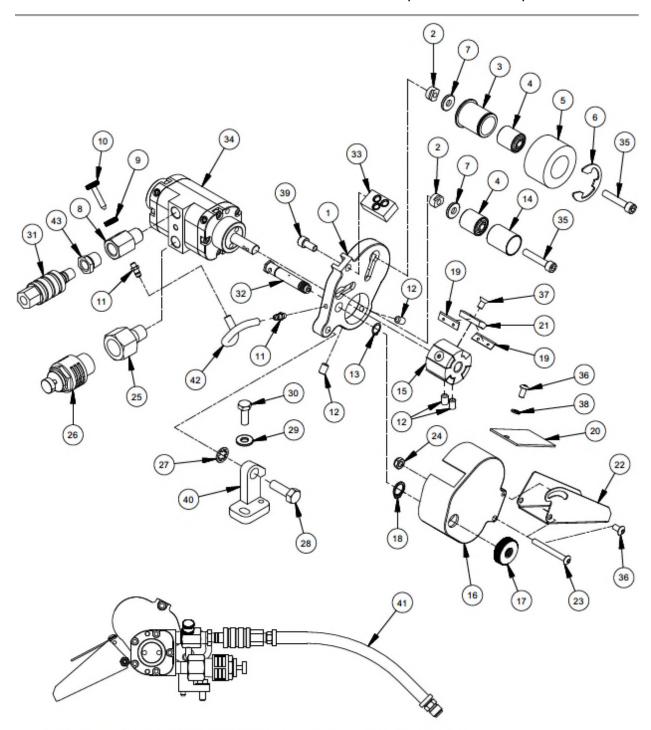

| HIGH TORQUE CHOPPER FOR INTERNAL MIX FIT TALON GUN | VH | TC-1000-TLN-IF |
|--|-------------|----------------|
| REV: | SHEET 1 / 2 | 1/10/2014 |




| | | | Parts List |
|------|----------------|--------|-----------------------------------|
| ITEM | PART NUMBER | QTY | DESCRIPTION |
| 1 | 5103-1-1 | 1 | BASE PLATE |
| 2 | 5103-4-1 | 2 | SLIDE ADJUSTING NUT |
| 3 | 5103-5-1 | 1 | RUBBER ROLL MANDREL |
| 4 | RC-1018A | 2 | BEARING |
| 5 | 5103-6-1 | 1 | CHOPPER RUBBER ROLL |
| 6 | 7205-3-31 | 1 | E-RING |
| 7 | 5103-18-1 | 2 | SPACER |
| 8 | HTM-4029 | 1 | INLET COUPLING |
| 9 | 5103-10-1 | 1 | LOCK RING |
| 10 | 5103-11-1 | 1 | THUMB SCREW |
| 11 | 7701-6-3 | 2 | 10-32 BARBED FITTING |
| 12 | 7102-11-6 | 4 | SET SCREW |
| 13 | 7205-2-6 | 1 | SNAP RING |
| 14 | 5103-7-1 | 1 | BEARING SLEEVE |
| 15 | 5103-28-1 | 1 | ROTOR HUB 8-BLADE |
| 16 | 5103-13-1 | 1 | CHOPPER COVER |
| 17 | 5103-14-1 | 1 | COVER NUT |
| 18 | 7205-2-8 | 1 | RETAINING RING |
| 19 | 5103-8-1 | 8 | CHOPPER BLADE |
| 20 | 5103-25-1 | 1 | TOP DEFLECTOR |
| 21 | 5103-29-1 | 4 | WEDGE INSERT 8-BLADE |
| 22 | 71320-1 | 1 | CHOPPER CHUTE |
| 23 | 7102-16-28 | 1 | BUTTON HEAD CAP SCREW |
| 24 | F-LN-1024 | 1 | NYLOCK NUT |
| 25 | VRC-2024 | 1 | ADAPTER |
| 26 | VRC-TM-2 | 1 | THROTTLE MUFFLER |
| 27 | 7202-5-10 | 1 | STAR WASHER |
| 28 | F-HB-05C-16 | 1 | HEX BOLT |
| 29 | F-FW-04-SAE | 1 | FLAT WASHER SAE |
| 30 | F-HB-04C-12 | 1 | 1/4 HEX BOLT |
| 31 | RC-1007 | 1 | VALVE |
| 32 | 5103-2-01 | 1 | AIR STUD |
| 33 | 5103-3-01 | 1 | ROVING GUIDE |
| 34 | HTM-4000-CW | 1 | AIR MOTOR ASSY-CLOCKWISE ROTATION |
| 35 | F-CS-04C-20 | 2 | CAP SCREW |
| 36 | F-BHCS-1024-06 | 2 | BUTTON HEAD CAP SCREW |
| 37 | F-FHCS-1024-06 | 4 | FLAT HEAD COUNTER SUNK SCREW |
| 38 | F-SW-1024 | 1 | LOCK WASHER |
| 39 | F-CS-04C-08 | 1 | CAP SCREW |
| 40 | TLN-1060-01 | 1 | CHOPPER BRACKET |
| 41 | RC-1084 | 1 | HOSE |
| 42 | 09073 | .33 FT | |
| 43 | PF-RB-04-02 | 1 | PIPE BUSHING |

HIGH TORQUE CHOPPER FOR INTERNAL MIX FIT TALON GUN VHTC-1000-TLN-IF

REV: SHEET 2 / 2 1/10/2014



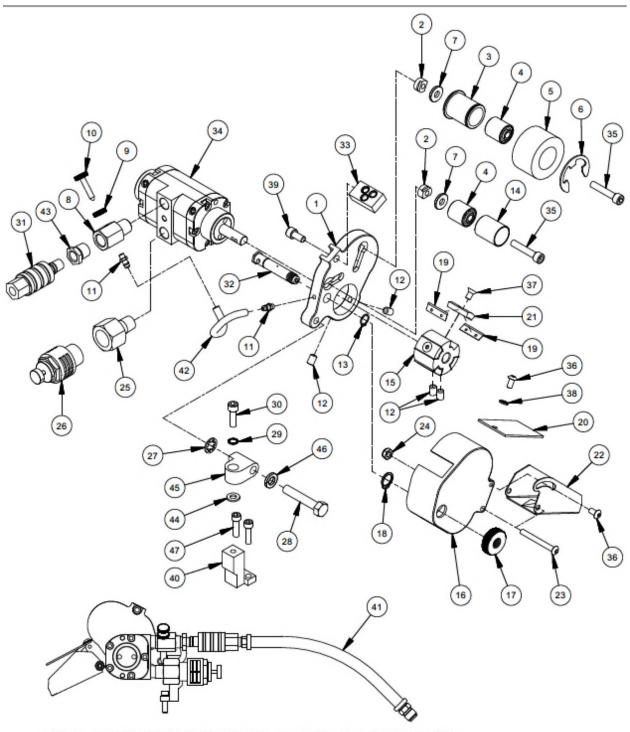

HIGH TORQUE CHOPPER FOR EXTERNAL MIX TALON GUN

VHTC-1000-TLN-X

REV: SHEET 1 / 2 1/10/2014




| | Parts List | | | | |
|------|----------------|--------|-----------------------------------|--|--|
| ITEM | PART NUMBER | QTY | DESCRIPTION | | |
| 1 | 5103-1-1 | 1 | BASE PLATE | | |
| 2 | 5103-4-1 | 2 | SLIDE ADJUSTING NUT | | |
| 3 | 5103-5-1 | 1 | RUBBER ROLL MANDREL | | |
| 4 | RC-1018A | 2 | BEARING | | |
| 5 | 5103-6-1 | 1 | CHOPPER RUBBER ROLL | | |
| 6 | 7205-3-31 | 1 | E-RING | | |
| 7 | 5103-18-1 | 2 | SPACER | | |
| 8 | HTM-4029 | 1 | INLET COUPLING | | |
| 9 | 5103-10-1 | 1 | LOCK RING | | |
| 10 | 5103-11-1 | 1 | THUMB SCREW | | |
| 11 | 7701-6-3 | 2 | 10-32 BARBED FITTING | | |
| 12 | 7102-11-6 | 4 | SET SCREW | | |
| 13 | 7205-2-6 | 1 | SNAP RING | | |
| 14 | 5103-7-1 | 1 | BEARING SLEEVE | | |
| 15 | 5103-28-1 | 1 | ROTOR HUB 8-BLADE | | |
| 16 | 5103-13-1 | 1 | CHOPPER COVER | | |
| 17 | 5103-14-1 | 1 | COVER NUT | | |
| 18 | 7205-2-8 | 1 | RETAINING RING | | |
| 19 | 5103-8-1 | 8 | CHOPPER BLADE | | |
| 20 | 5103-25-1 | 1 | TOP DEFLECTOR | | |
| 21 | 5103-29-1 | 4 | WEDGE INSERT 8-BLADE | | |
| 22 | 5103-24-1 | 1 | CHOPPER CHUTE | | |
| 23 | 7102-16-28 | 1 | BUTTON HEAD CAP SCREW | | |
| 24 | F-LN-1024 | 1 | NYLOCK NUT | | |
| 25 | VRC-2024 | 1 | ADAPTER | | |
| 26 | VRC-TM-2 | 1 | THROTTLE MUFFLER | | |
| 27 | 7202-5-10 | 1 | STAR WASHER | | |
| 28 | F-HB-05C-28 | 1 | HEX BOLT | | |
| 29 | F-SBW-04 | 1 | WASHER | | |
| 30 | F-CS-04C-12 | 1 | CAP SCREW | | |
| 31 | RC-1007 | 1 | VALVE | | |
| 32 | 5103-2-01 | 1 | AIR STUD | | |
| 33 | 5103-3-01 | 1 | ROVING GUIDE | | |
| 34 | HTM-4000-CW | 1 | AIR MOTOR ASSY-CLOCKWISE ROTATION | | |
| 35 | F-CS-04C-20 | 2 | CAP SCREW | | |
| 36 | F-BHCS-1024-06 | 2 | BUTTON HEAD CAP SCREW | | |
| 37 | F-FHCS-1024-06 | 4 | FLAT HEAD COUNTER SUNK SCREW | | |
| 38 | F-SW-1024-06 | 1 | LOCK WASHER | | |
| 39 | F-CS-04C-08 | 1 | CAP SCREW | | |
| | | 1 | | | |
| 40 | TLN-2040 | 1 | CHOPPER MOUNT | | |
| 41 | RC-1084 | _ | HOSE | | |
| 42 | 09073 | .33 FT | | | |
| 43 | PF-RB-04-02 | 1 | PIPE BUSHING | | |
| 44 | RC-1034 | 1 | NYLON WASHER | | |
| 45 | TLN-2042 | 1 | PIVOT PIECE | | |
| 46 | F-SW-05 | 1 | LOCK WASHER | | |
| 47 | F-CS-1224-12 | 2 | CAP SCREW | | |

HIGH TORQUE CHOPPER FOR EXTERNAL MIX TALON GUN

VHTC-1000-TLN-X

REV: SHEET 2 / 2 1/10/2014



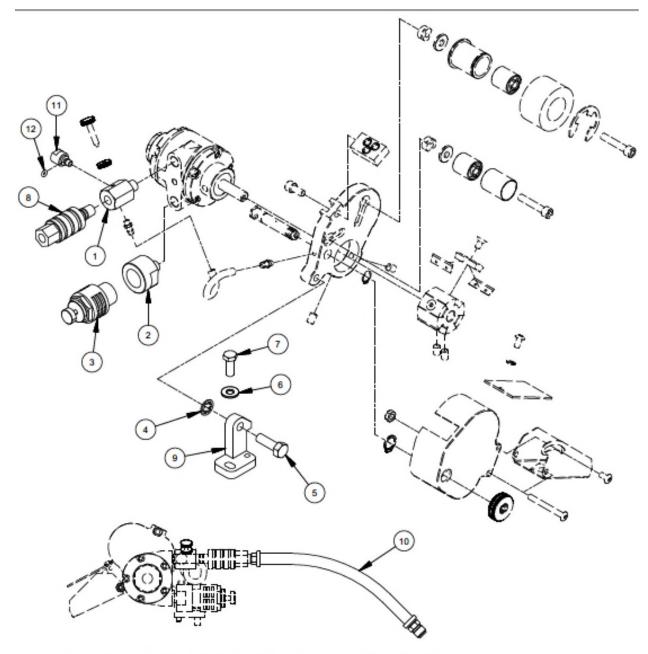

| CHOPPER CONVERSION KIT FOR INTERNAL MIX TALON GUN | | VRC-TLN-I-CK |
|---|-------------|--------------|
| REV: | SHEET 1 / 2 | 11/6/2014 |



| | Parts List | | | | |
|------|-------------|-----|-------------------|--|--|
| ITEM | PART NUMBER | QTY | DESCRIPTION | | |
| 1 | VRC-1016 | 1 | CHOPPER AIR VALVE | | |
| 2 | VRC-2014 | 1 | ADAPTER | | |
| 3 | VRC-TM-2 | 1 | THROTTLE MUFFLER | | |
| 4 | 7202-5-10 | 1 | STAR WASHER | | |
| 5 | F-HB-05C-16 | 1 | HEX BOLT | | |
| 6 | F-FW-04-SAE | 1 | FLAT WASHER SAE | | |
| 7 | F-HB-04C-12 | 1 | 1/4 HEX BOLT | | |
| 8 | RC-1007 | 1 | VALVE | | |
| 9 | TLN-1060-01 | 1 | CHOPPER BRACKET | | |
| 10 | RC-1084 | 1 | HOSE | | |
| 11 | VRC-1017 | 1 | OIL PORT PLUG | | |
| 12 | O-B-006 | 1 | O-RING | | |

USE VRC-1000-TLN-I DRAWING FOR COMPLETE LIST OF CHOPPER PARTS


MAGNUM VENUS PLASTECH

CHOPPER CONVERSION KIT FOR INTERNAL MIX TALON GUN

VRC-TLN-I-CK

SHEET 2 / 2 11/6/2014



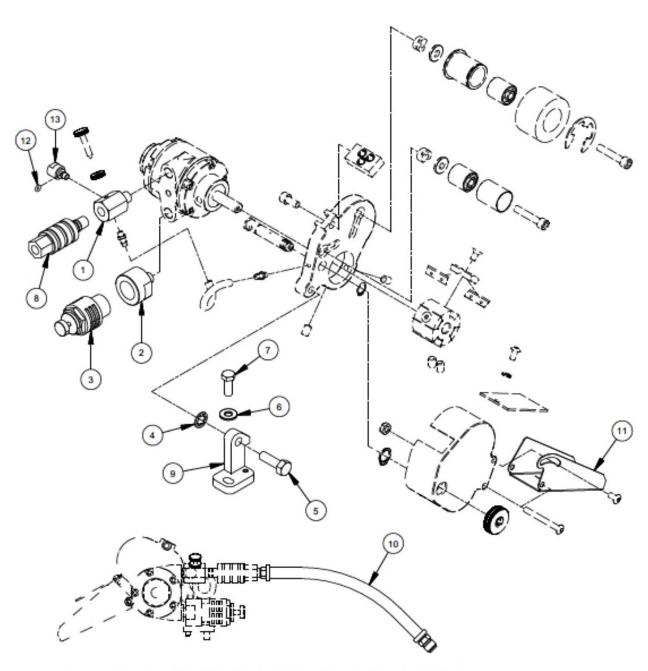

| CHOPPER CONVERSION KIT FOR INTERNAL MIX FIT TALON GUN | VRC-TLN-IF-CK | |
|---|---------------|-----------|
| REV: | SHEET 1 / 2 | 11/6/2014 |



| | Parts List | | | |
|------|-------------|-----|-------------------|--|
| ITEM | PART NUMBER | QTY | DESCRIPTION | |
| 1 | VRC-1016 | 1 | CHOPPER AIR VALVE | |
| 2 | VRC-2014 | 1 | ADAPTER | |
| 3 | VRC-TM-2 | 1 | THROTTLE MUFFLER | |
| 4 | 7202-5-10 | 1 | STAR WASHER | |
| 5 | F-HB-05C-16 | 1 | HEX BOLT | |
| 6 | F-FW-04-SAE | 1 | FLAT WASHER SAE | |
| 7 | F-HB-04C-12 | 1 | 1/4 HEX BOLT | |
| 8 | RC-1007 | 1 | VALVE | |
| 9 | TLN-1060-01 | 1 | CHOPPER BRACKET | |
| 10 | RC-1084 | 1 | HOSE | |
| 11 | 71320-1 | 1 | CHOPPER CHUTE | |
| 12 | O-B-006 | 1 | O-RING | |
| 13 | VRC-1017 | 1 | OIL PORT PLUG | |

USE VRC-1000-TLN-IF DRAWING FOR COMPLETE LIST OF CHOPPER PARTS

MAGNUM VENUS PLASTECH


CHOPPER CONVERSION KIT FOR INTERNAL MIX FIT TALON GUN

VRC-TLN-IF-CK

REV:

SHEET 2 / 2 11/6/2014



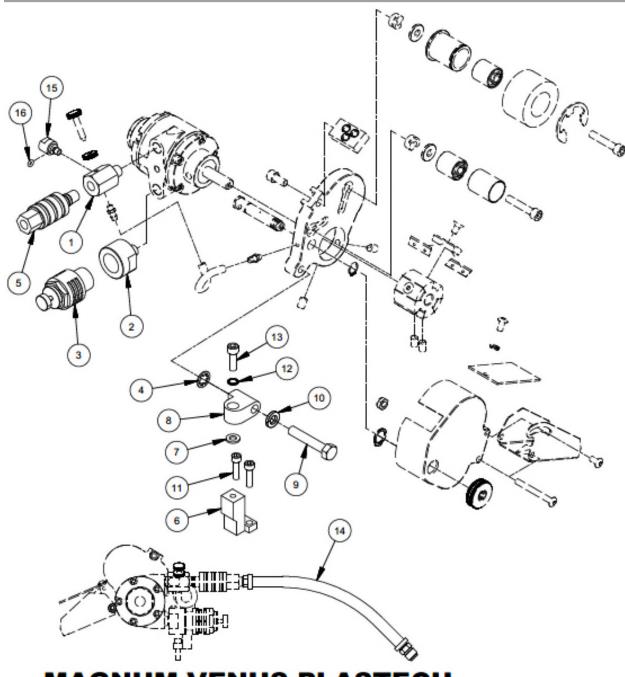

CHOPPER CONVERSION KIT FOR EXTERNAL MIX TALON GUN

REV: SHEET 1 / 2 11/6/2014



| | Parts List | | | |
|------|--------------|-----|-------------------|--|
| ITEM | PART NUMBER | QTY | DESCRIPTION | |
| 1 | VRC-1016 | 1 | CHOPPER AIR VALVE | |
| 2 | VRC-2014 | 1 | ADAPTER | |
| 3 | VRC-TM-2 | 1 | THROTTLE MUFFLER | |
| 4 | 7202-5-10 | 1 | STAR WASHER | |
| 5 | RC-1007 | 1 | VALVE | |
| 6 | TLN-2040 | 1 | CHOPPER MOUNT | |
| 7 | RC-1034 | 1 | NYLON WASHER | |
| 8 | TLN-2042 | 1 | PIVOT PIECE | |
| 9 | F-HB-05C-28 | 1 | HEX BOLT | |
| 10 | F-SW-05 | 1 | LOCK WASHER | |
| 11 | F-CS-1224-12 | 2 | CAP SCREW | |
| 12 | F-SBW-04 | 1 | WASHER | |
| 13 | F-CS-04C-12 | 1 | CAP SCREW | |
| 14 | RC-1084 | 1 | HOSE | |
| 15 | VRC-1017 | 1 | OIL PORT PLUG | |
| 16 | O-B-006 | 1 | O-RING | |

USE VRC-1000-TLN-X DRAWING FOR COMPLETE LIST OF CHOPPER PARTS


MAGNUM VENUS PLASTECH

CHOPPER CONVERSION KIT FOR EXTERNAL MIX TALON GUN

VRC-TLN-X-CK

SHEET 2 / 2 11/6/2014



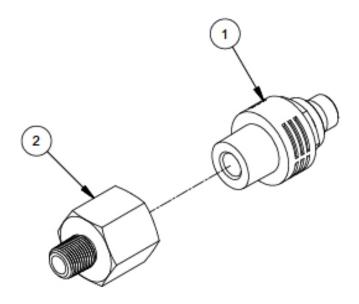


REPLACES 5103-02-01 SPEED CONTROL ASSEMBLY FOUND ON VRC STYLE CHOPPERS

| Parts List | | | | |
|------------|-------------|-----|------------------|--|
| ITEM | PART NUMBER | QTY | DESCRIPTION | |
| 1 | VRC-TM-1 | 1 | THROTTLE MUFFLER | |
| 2 | VRC-1014 | 1 | REDUCER ADAPTER | |

| THROTTLE MUFFLER ASSEMBLY | | VRC-TM-100 |
|---------------------------|-------------|------------|
| REV: | SHEET 1 / 1 | 6/22/2012 |



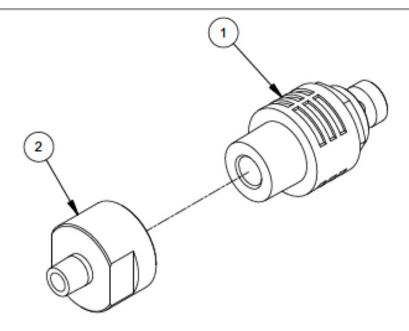

REPLACES 5103-02-01 SPEED CONTROL ASSEMBLY FOUND ON VRC STYLE CHOPPERS


| Parts List | | | | |
|------------|-------------|-----|------------------|--|
| ITEM | PART NUMBER | QTY | DESCRIPTION | |
| 1 | VRC-TM-2 | 1 | THROTTLE MUFFLER | |
| 2 | VRC-2014 | 1 | ADAPTER | |

MAGNUM VENUS PLASTECH

| LARGE THROTTLE MUFFLER ASSEMBLY | VRC-TM-200 |
|---------------------------------|------------|
|---------------------------------|------------|

REV: A 1/3/2014 SHEET 1 / 1 6/22/2012



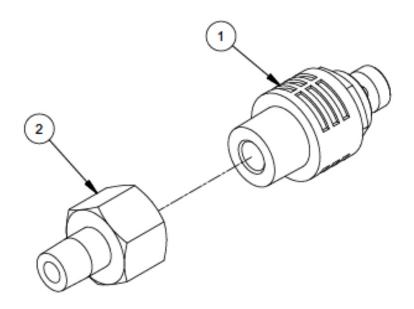


| Parts List | | | | |
|------------|-------------|-----|------------------|--|
| ITEM | PART NUMBER | QTY | DESCRIPTION | |
| 1 | VRC-TM-2 | 1 | THROTTLE MUFFLER | |
| 2 | VRC-2024 | 1 | ADAPTER | |

| THROTTLE MUFFLER ASSEMBLY FOR HTM STYLE CHOPPER MOTORS VRC-TM-200-HTM |
|---|
|---|

REV: SHEET 1 / 1 1/17/2014



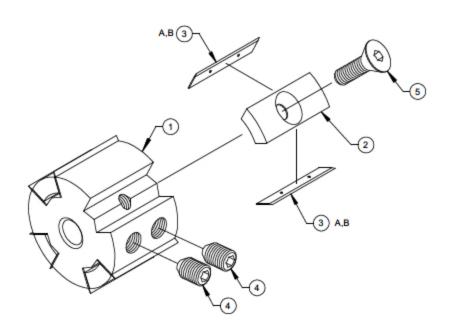

MAGNUM VENUS PRODUCTS

8-Blade Wedge Rotor Assy - RC1S1

5103-03-01

D5103-03-1 REV. - 3/20/00




8-Blade Wedge Rotor Assy - RC1S1 5103-03-01 PARTS LIST

| ITEM | PART NO. | QTY | DESCRIPTION |
|------|------------|-----|---------------------------------------|
| 1 | 5103-28-1 | 1 | ROTOR HUB - 8-BLADE |
| 2 | 5103-29-1 | 4 | WEDGE INSERT - 8-BLADE |
| 3 | 5103-8-1 | 8 | CHOPPER BLADE |
| 4 | 7102-11-6 | 2 | SOCKET HD CUP POINT SET SCREW |
| 5 | 7102-13-6 | 4 | SOCKET FLAT HEAD SCREW |
| 6 | D5103-03-1 | 1 | 8-BLADE WEDGE ROTOR ASSY - RC 1S1 DWG |

ASSOCIATED PARTS AND ASSEMBLIES

| ITEM | PART NO. | QTY | DESCRIPTION |
|------|-------------|-----|--------------------------|
| 3A | 9210-1-100 | 1 | BLADES (PACKAGE OF 100) |
| 3B | 5103-8-1000 | 1 | BLADES (PACKAGE OF 1000) |



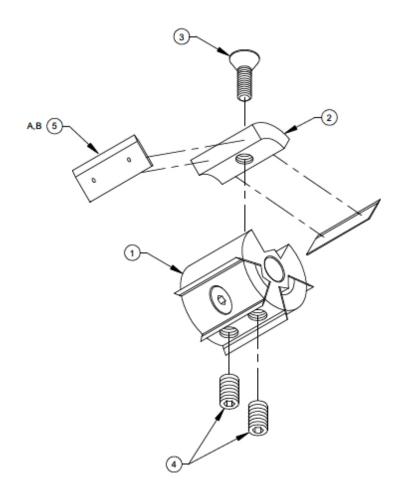

MAGNUM VENUS PRODUCTS

| 6-BLADE WEDGE ROTOR ASSY - RC1S1 | 5103-04-01 |
|----------------------------------|------------|
| | |



6-Blade Wedge Rotor Assy - RC1S1 5103-04-01 PARTS LIST

| ITEM | PART NO. | QTY | DESCRIPTION |
|------|------------|-----|--------------------------------------|
| 1 | 5103-30-1 | 1 | ROTOR HUB - 6-BLADE |
| 2 | 5103-31-1 | 3 | WEDGE INSERT - 6-BLADE |
| 3 | 7102-13-6 | 3 | SOCKET FLAT HEAD SCREW |
| 4 | 7102-11-6 | 2 | SOCKET CUT POINT SET SCREW |
| 5 | 5103-8-1 | 6 | CHOPPER BLADE |
| 6 | D5103-04-1 | 1 | 6-BLADE WEDGE ROTOR ASSY - RC1S1 DWG |


ASSOCIATED PARTS AND ASSEMBLIES

| ITEM | PART NO. | QTY | DESCRIPTION |
|------|-------------|-----|-------------------------|
| 5A | 9210-1-100 | 1 | BLADES (PACKAGE OF 100) |
| 5B | 5103-8-1000 | 1 | BLADES (PACKAGEOF 1000) |


FIGURE 1-1





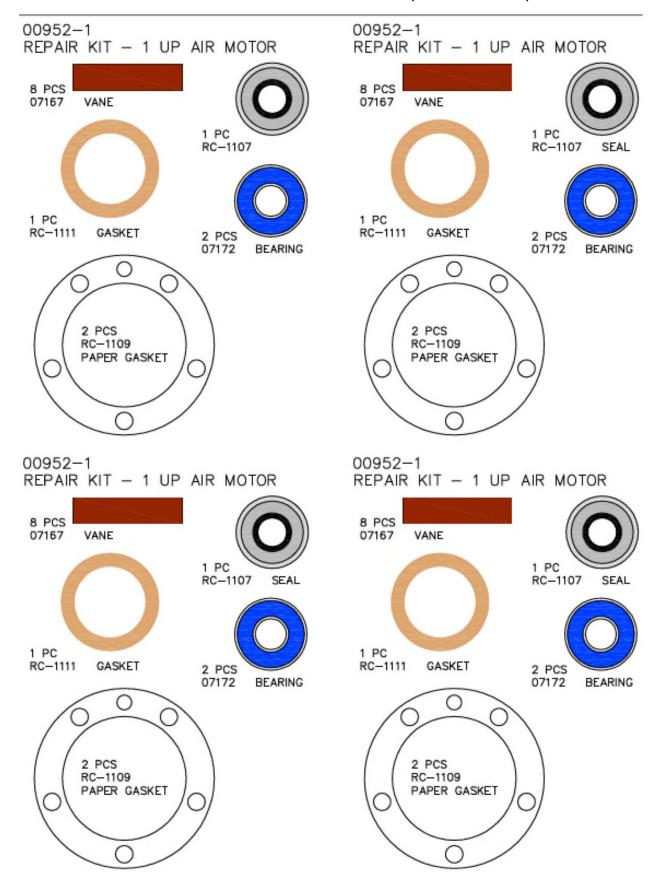



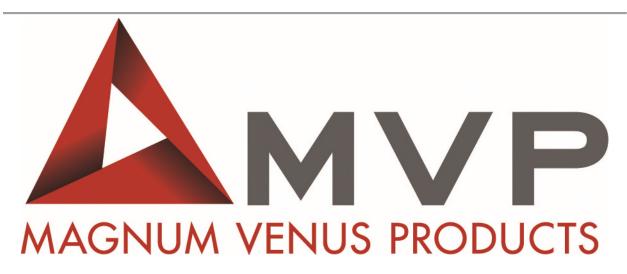

CORPORATE HEADQUARTERS 2030 Falling Waters Rd, Suite 350, Knoxville, TN 37922 · USA · Tel: (865) 686-5670

> DISTRIBUTION AND PURCHASING 642 Barbrow Ln, Knoxville, TN 37932 · USA · Tel: (865) 684-4416

TECHNOLOGY CENTER AND MANUFACTURING

1862 Ives Ave, Kent, WA 98032 · USA · Tel (253) 854-2660 · Fax (253) 854-1666

E-mail: info@mvpind.com

For a list of international distributors, visit our website at:

www.mvpind.com/mvp-international

